

# 30180

# 30181

## Emergency Cubicle Shower

### Type: Combination Shower

Designed for locations where space is at a premium or the shower needs to be enclosed, this emergency combination shower includes an integral drain sump and strip screens to reduce the risk of water outside the cubicle area. Includes interior mounted, ANSI compliant eye/face wash with cover. Shower and eyes/face wash are hand activated. Upgrade to model number 30181 to add a 120V sump pump, suitable for non-hazardous locations.



30181 shown without strip screens


## Specifications

MATERIALS OF CONSTRUCTION	
PIPEWORK AND FITTINGS	Stainless steel
OPERATING VALVES	Showers: 316L stainless steel, two piece stay open valve Eye/face: chrome plated brass
SHOWER SPRAY OUTLETS	ABS shower rose
STANDARD FINISH	GRP
FRAME	Stainless steel
EYE WASH	Acrylic Capped ABS
SERVICES	
WATER INLET	1 in Male NPT
DESIGN OPERATING PRESSURE	2 to 6 BAR G (29 to 87 PSI)
TEST PRESSURE	10.3 BAR G (149 PSI)
MINIMUM FLOW AT OPERATING PRESSURE	Showers: 76 liters/minute minimum (20 US Gallons) Eye/face wash: 11.4 liters/minute minimum (3 US Gallons)
ELECTRICAL EQUIPMENT - NON-HAZARDOUS (30181)	Suitable for use in areas classified as non-hazardous
ELECTRICAL SUPPLY PUMP (30181)	120V single phase, 60Hz (plug end provided)
ENVIRONMENTAL OPERATING TEMPERATURE	
MINIMUM AMBIENT OPERATING TEMPERATURE	5° C (41° F)
MAXIMUM AMBIENT OPERATING TEMPERATURE	35° C (95° F)
OPERATIONAL	
SHOWER/BODY SPRAY OPERATION	Hand activated (Optional foot panel for hands free operation)
EYE/FACE WASH OPERATION	Pull lid forward
NOMINAL WEIGHTS and DIMENSIONS	
DIMENSIONS - STANDARD ORIENTATION (W x D x H)	30180: 1021 mm (40.2 in) x 1049 mm (41.3 in) x 2408 mm (94.8 in) 30181: 995 mm (39.2 in) x 1061 mm (41.8 in) x 2408 mm (94.8 in)
WEIGHT	30180: 116 kg (255 lb) 30181: 123 kg (270 lb)

**30180**  
**30181**

Product Data Sheet - G.A. Drawings

**Emergency Cubicle Shower Type: Combination Shower**

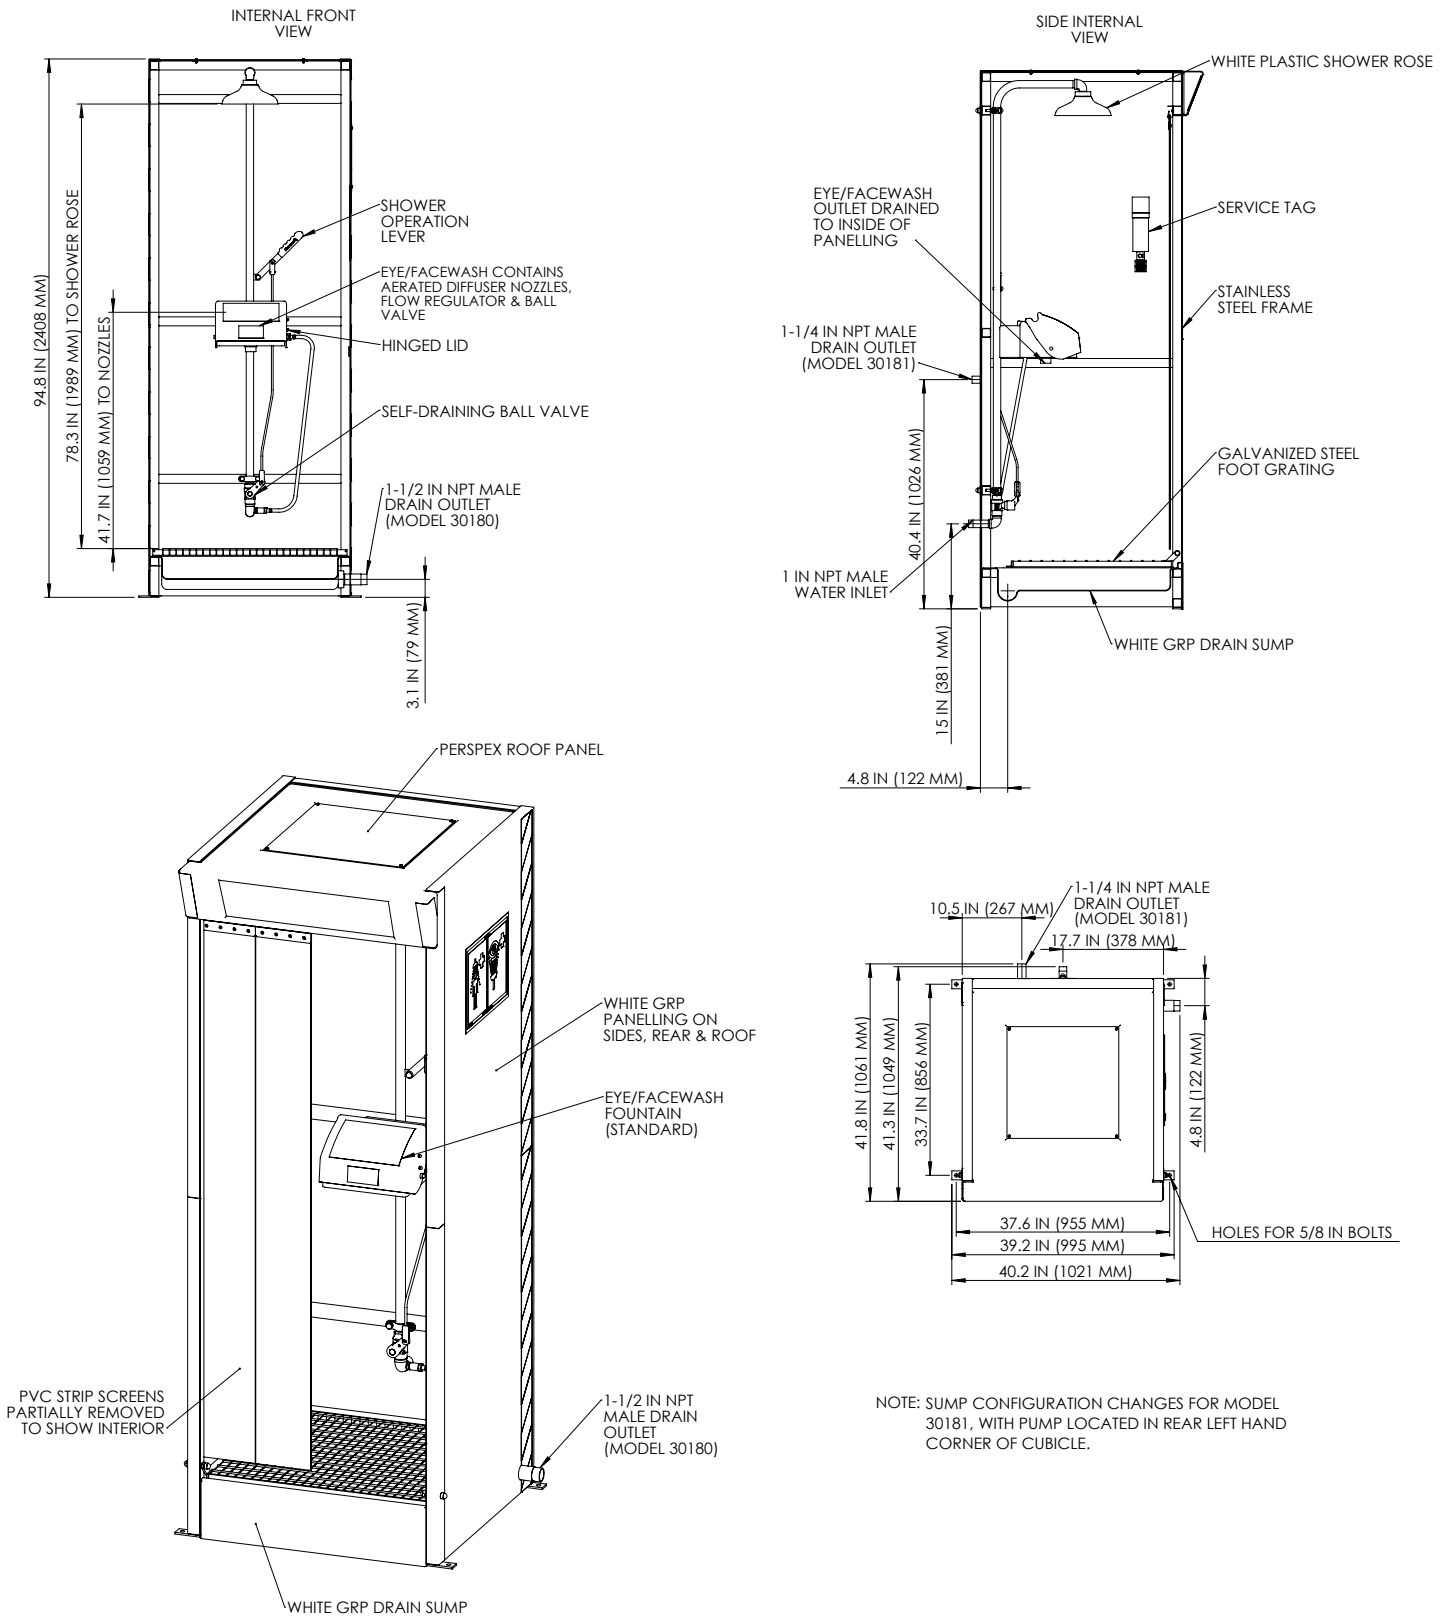

North America: 1-800-798-9250  
custserv@justritemfg.com

Europe: 1-217-234-7494  
Asia Pacific: 011+86-756-322-9909  
internationalcs@justritemfg.com

©2017 Justrite Mfg. Co., LLC

