

What Makes a Safety Cabinet Safe?

Justrite® Sure-Grip® EX Safety Storage Cabinets offer top performance for flammable liquid storage and protection.

EXtra safe, EXtra sturdy, EXtra secure

Fusible links hold doors wide open and melt at 165°F (74°C) for automatic closure (on self-closing models).

Sturdy 18-gauge (1-mm) double wall steel construction with 1-1/2-in (38-mm) of insulating air space.

Easy-close, self-latching doors; U-Loc™ handle (shown below) does not require manual rotation to engage mandatory three-point latch.

Fully welded, not riveted, construction holds squareness for longer life and offers greater protection in a fire since air gaps are reduced.

Continuous piano hinge provides smooth closure.

Durable and chemical-resistant, lead-free powder-coat paint finish, inside and out, retains high gloss look and minimizes the effects of corrosion and humidity.

Dual vents with built-in flash arresters strategically placed at bottom and opposite top.




45-gallon (170-liter) self-close door style

Concealed self-close mechanism provides obstruction-free access to top shelf space. Self-indexing doors guarantee they will close in sequence and ensure a tight closure from top to bottom (on self-closing models). Patent pending

Patented SpillSlope® safety shelves direct spills to back and bottom of leakproof sump. Adjustable on 3-in (76-mm) centers, they meet ANSI standards with a 350-lb (159-kg) safe allowable load.

Welded shelf hangers interlock with shelf to offer maximum "nonslip" stability with no flimsy brackets to lose.

2-in (51-mm) leakproof containment sump holds leaks and meets EPA requirements.

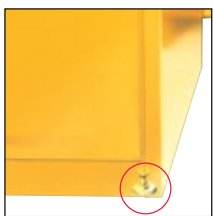


Adjustable leveling feet make it easy to balance cabinets on uneven surfaces.



Built-in grounding connector (on outside side panel) for easy grounding. Shown here with optional ground wire 08500.



Complies with OSHA 29 CFR 1910.106 and NFPA Code 30, section 9.5.3; FM Approved

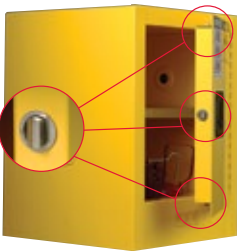

Stainless steel, 3-point bullet self-latching system provides easy, fail-safe, positive door closure with increased heat resistance. Patent pending



Easily secure your contents—U-Loc™ handle includes double key set or can be padlocked (not included) for greater security. Patent pending



Patented SpillSlope® safety shelves direct spills to back and bottom of leakproof sump; adjust on 3-in (76-mm) centers for versatile storage. Meets ANSI MH28.1



Welded construction holds squareness for long life; door astragal provides extra sturdiness.



Highly visible HazAlert™ reflective label provides warning—"Flammable – Keep Fire Away" in English, Spanish, and French.