

Reduce Cigarette Litter and Fire Risks with Durable Outdoor Ashtrays



 **Justrite**®


EAGLE®
Justrite Safety Group

An estimated 4.5 trillion cigarette butts are littered globally each year, comprising 30-40% of all items collected in annual international coastal and urban clean-ups since the 1980s.*

In the United States alone, about 124 billion cigarette butts were littered in 2022. Cigarette filters contain cellulose acetate, a plastic that can take up to 10 years to decompose.**

Outdoor ashtrays from Justrite and Eagle are vital for enhancing safety, aesthetics, environmental responsibility, durability, and convenience in outdoor smoking areas.

*Place-based estimates of cigarette butt litter raise environmental justice concerns in the United States – PubMed . ** Tiny But Deadly: Your Butt on Plastic – Earth Day

Why are Outdoor Ashtrays Necessary?

Proper cigarette disposal is crucial for our environment and safety. A single discarded cigarette butt can take up to a decade to decompose, releasing toxic chemicals into soil and waterways and posing a fire hazard in industrial areas.



Fire Safety

Outdoor ashtrays designed with self-extinguishing features limit oxygen, quickly extinguishing burning cigarette butts and significantly reducing the risk of fire hazards associated with improperly disposed cigarette waste.



Compliance and Regulations

Adhere to the laws and regulations governing workplace smoking areas, including those within manufacturing facilities.



Environmental Responsibility

These ashtrays help prevent littering and promote responsible smoking habits by providing designated receptacles for cigarette disposal. This is particularly important as many establishments aim to keep their properties clean and environmentally friendly.



Employee Management

Outdoor ashtrays encourage smokers to use designated areas, protecting non-smokers and improving workplace efficiency by reducing unauthorized breaks.



Convenience

Some outdoor ashtrays feature compact designs that can be easily placed near seating areas. This makes it convenient for smokers to dispose of cigarette butts properly, helping to prevent litter.



Aesthetics and Durability

Maintain a clean and appealing front for your manufacturing site to welcome visitors and employees. Outdoor ashtrays should be durable enough to endure different weather conditions, minimizing the need for regular maintenance or repainting.

Why Choose Justrite or Eagle Outdoor Ashtray?

Justrite and Eagle outdoor ashtrays feature safety measures and compliance standards to minimize fire risks and promote proper cigarette disposal.

SAFETY AND COMPLIANCE



Self-Extinguishing Mechanism

Restricts oxygen flow to discarded cigarettes and uses a special shape that smothers flames.



Fire-Resistant Materials

Made with fire-resistant steel and high-melting-point plastics.



Compliance

Justrite and Eagle ashtrays are FM approved and ADA compliant.



Secure Mounting Options

Weighted bases for stability and mounting brackets for secure installation.

DURABILITY AND EASE OF USE



Weather Resistant and Durable

Corrosion-resistant finishes and weather-sealed openings to prevent water infiltration. Resistant to rust, dents, and cracks.



Easy Cleaning

Easily removable tops for emptying and cleaning and galvanized steel pails for safe ash collection.



Low-Maintenance

Large internal neck cavity minimizes clogging.



Versatility

Available in various colors and sizes, including 1-gallon and 5-gallon capacities.





Justrite Outdoor Ashtrays elevate your business's appearance while keeping your property clean and free of discarded cigarette butts. The self-extinguishing design ensures safe collection of cigarette waste and minimizes fire hazards.

The Original Smoker's Cease Fire® Cigarette-Butt Receptacles are innovative outdoor smoking waste management solutions designed to address cigarette litter and fire safety concerns. These receptacles offer several key features and benefits:

Design and Construction

- Made of flame-retardant, durable polyethylene
- Resistant to rust, dents, and cracks
- Self-extinguishing design for enhanced safety

Functionality

- Safely collects cigarette butts, reducing litter and fire risks
- Includes a galvanized steel bucket with high capacity
- Tie-down notches for security and stability in harsh weather

Variants

- Personal Smoker's Cease-Fire model:
- Compact design
- Dimensions: 30 inches (762 mm) high, 11 inches (279 mm) diameter
- Suitable for areas with lighter smoking traffic


Maintenance

- Optional disposable bucket liners available
- Easy cleaning: remove bag, close tightly, and discard

Benefits


- Enhances business image
- Keeps entrances clean from cigarette litter
- Requires minimal maintenance

These receptacles provide an effective solution for businesses looking to maintain a clean environment while addressing the specific needs of smoking areas.

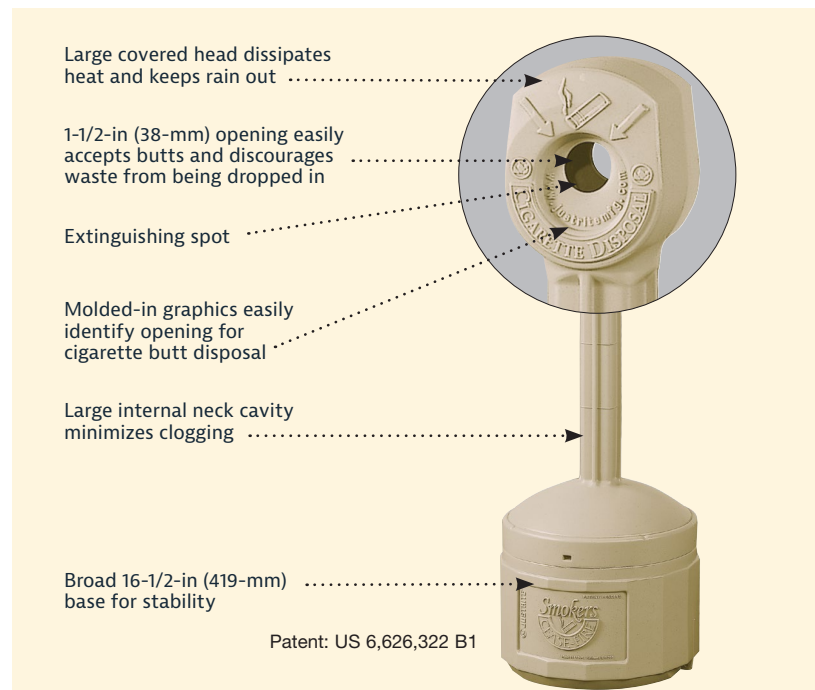

Description	Capacity	H x Dia	Approv/Lstg Regulation	Pewter Gray Model	Adobe Beige Model	Deco Black Model	Terra Cotta Model	Forest Green Model
Original Smoker's Cease Fire®	4 gallons (15 L)	38.5 x 16.5 in (978 x 419 mm)	FM	26800	26800B	26800D	26800T	26800G
Personal Smoker's Cease Fire®	1 gallon (4 L)	30 x 11 in (762 x 279 mm)		26806	26806B	26806D	26806T	26806G
Disposable bucket liner Original Smoker's Cease Fire® - 10 pack with twist ties.			FM*			26827		
Bucket liner master pack for Original Smoker's Cease Fire® 25 packs of ten with twist ties			—			26830		

* The liner and smoker receptacle used together are an FM-approved system. The bucket liner is for hygienic purposes, and only for use within the Smoker's Cease-Fire® system.

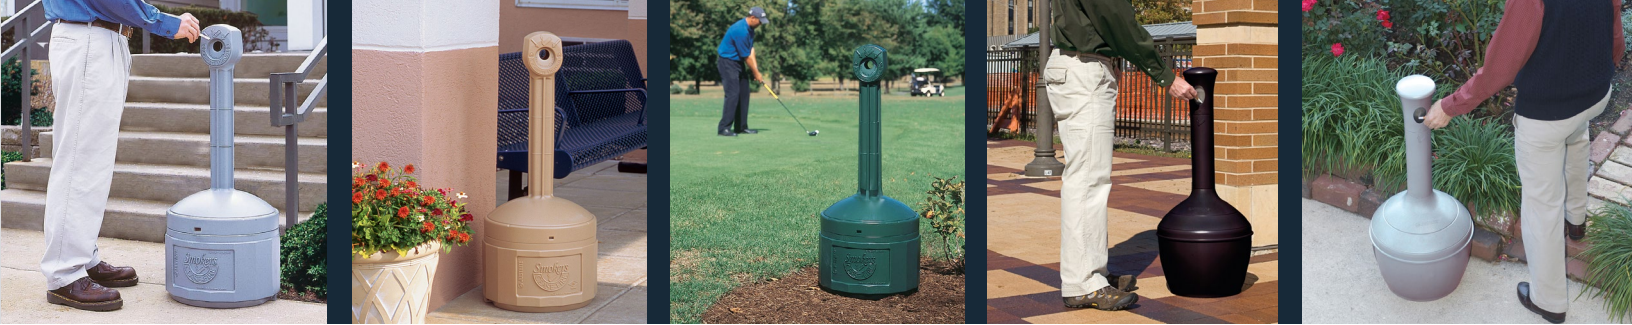

Elite™ Smoker's Cease Fire® Cigarette-Butt Receptacles are designed to provide a safe and attractive solution for cigarette disposal in outdoor industrial settings. These receptacles offer several key features:

Safety and Fire Prevention

- Fire-safe construction approved by FM Approvals
- Reduces the risk of fire by containing cigarette butts
- Stainless-steel snuffer discourages using the top to extinguish cigarettes

Design and Construction

- Contemporary styling with a polyethylene top and galvanized steel base
- Two-piece base with neck features a durable powder coat finish for rust resistance
- Polyethylene top keeps rain out

Ease of Use and Maintenance

- Removable steel pail with optional disposable bucket liner for easy cleaning
- Simple emptying process by untwisting a compression nut, without separate screws

Additional Features

- Optional cable kit available for severe weather conditions or security purposes
- Ideal for various industrial settings, including factories, backdoor entrances, alleyways, loading docks, and service shops

The Elite™ Smoker's Cease Fire® Cigarette-Butt Receptacles combine functionality with aesthetics, offering a practical solution for cigarette disposal while maintaining a clean and safe environment.



Description	Color	H x Dia	Approv/Lstg Regulation	Capacity	Model
Elite™ Smoker's	Cool Gray	38 x 12 in (965 x 305 mm)	FM	4 gallons (15 L)	268501
	Sierra Tan				268502
	Deco Black				268503
Anchoring cable kit					268505
Brass padlock					268506
Disposable bucket liner - 10 pack with twist ties.			FM*	—	26827
Liner master pack - 25 packs of ten with twist ties					26830
Replacement pail					26802

* The liner and smoker receptacle used together are an FM-approved system. The bucket liner is for hygienic purposes, and only for use within the Smoker's Cease-Fire® system.



Heavy Duty Butt Cans are specialized smoking receptacles designed for outdoor use, particularly in industrial settings. These slim-styled containers offer a practical solution for cigarette butt disposal while addressing safety and aesthetic concerns. Key Features:

Design and Construction:

- Slim-styled, self-extinguishing receptacles
- Polyethylene top with stainless-steel snuffer
- Fire-safe galvanized steel two-piece base with neck
- Tough powder coat finish for rust resistance

Functionality:

- Hides cigarette butts and reduces fire risk
- Keeps rain out with polyethylene top
- Optional cable kit for severe weather or security

Maintenance:

- Easy to empty by untwisting compression nut at the base
- No separate screws to lose during maintenance

Ideal Locations:

- Outdoor industrial settings
- Factories
- Backdoor entrances
- Alleyways
- Loading docks
- Service and repair shops

These Heavy Duty Butt Cans provide a practical and safe solution for cigarette disposal in various outdoor environments, combining durability with ease of maintenance.



Description	H x Dia	Capacity	Safety Red Model
Heavy Duty Butt Can	34 x 11.50 in (860 x 292 mm)	2.50 gallons (9 L)	26810R
	38.50 x 11.50 in (980 x 292 mm)	5 gallons (19 L)	26811R



Keep outdoor smoking areas clean with FM-compliant ashtrays featuring an oxygen-restricting design that quickly extinguishes cigarette butts. The removable top allows easy emptying, while the rain-protective design keeps water out and odors away. Available in two styles: durable polyethylene or heavy-duty galvanized steel.

SafeSmoker™ Cigarette Receptacle

- Made of high-density polyethylene with UV inhibitors
- Features a galvanized steel collection bucket inside
- Oxygen-restricting design quickly extinguishes burning butts
- Easy-to-remove top for emptying the internal bucket
- Rain-protective design prevents water ingress and odor
- Includes integrated hold-down tabs for security and wind protection



Eagle Butt Cans

- Suitable for both indoor and outdoor designated smoking areas
- Consists of a poly tube and galvanized can base
- Available in two colors:
- Yellow for in-plant use
- Beige for office or commercial areas

Original Butt Cans

- All-metal construction using galvanized steel
- Ideal for industrial smoking areas
- 5-gallon (18.9 L) capacity
- Available in yellow or beige

These products offer various options for businesses and organizations to maintain clean and safe smoking areas while addressing different environmental and aesthetic needs.





Model	Description	Dimensions (dia. x height)	Capacity	Weight	Shipping Sizes (L x W x H)
SafeSmoker™ Cigarette Receptacle					
1208BEIGE	Beige	17.25 x 43.25 (43.8 x 109.9 cm)	4 gallons (15.2 L)	10 lbs. (4.5 kg.)	17.25 x 17.25 x 25 (44.5 x 44.5 x 63.5)
1208BROWN	Brown	17.25 x 43.25 (43.8 x 109.9 cm)	4 gallons (15.2 L)	10 lbs. (4.5 kg.)	17.25 x 17.25 x 25 (44.5 x 44.5 x 63.5)
1208GRAY	Gray	17.25 x 43.25 (43.8 x 109.9 cm)	4 gallons (15.2 L)	10 lbs. (4.5 kg.)	17.25 x 17.25 x 25 (44.5 x 44.5 x 63.5)
1208BLACK	Black	17.25 x 43.25 (43.8 x 109.9 cm)	4 gallons (15.2 L)	10 lbs. (4.5 kg.)	17.25 x 17.25 x 25 (44.5 x 44.5 x 63.5)
1206BEIGE	Beige	15.25 x 37.75 (38.8 x 95.9 cm)	5 quarts (4.7 L)	7 lbs. (3.2 kg.)	16 x 16 x 21 (40.7 x 40.7 x 53.4)
1206BROWN	Brown	15.25 x 37.75 (38.8 x 95.9 cm)	5 quarts (4.7 L)	7 lbs. (3.2 kg.)	16 x 16 x 21 (40.7 x 40.7 x 53.4)
1206GRAY	Gray	15.25 x 37.75 (38.8 x 95.9 cm)	5 quarts (4.7 L)	7 lbs. (3.2 kg.)	16 x 16 x 21 (40.7 x 40.7 x 53.4)
1206BLACK	Black	15.25 x 37.75 (38.8 x 95.9 cm)	5 quarts (4.7 L)	7 lbs. (3.2 kg.)	16 x 16 x 21 (40.7 x 40.7 x 53.4)

Capacity	Dimensions (dia x height)	Yellow Model	Beige Model	Black Model	Weight	Shipping Sizes (L x W x H)
Metal/Poly Butt Cans						
2 gal./7.58 L	11 x 35 (27.9 x 88.9 cm)	1202	1202BEI	1202BLK	5 lbs. (2.3 kg.)	13 x 13 x 28 (33.1 x 33.1 x 71.2 cm)
5 gal./18.9 L	12 x 40 (30.5 x 101.6 cm)	1205	1205BEI	1205BLK	7 lbs. (3.2 kg.)	13 x 13 x 28 (33.1 x 33.1 x 71.2)
Original Butt Can						
5 gal./18.9 L	12 x 33 (30.5 x 83.8 cm)	1200YELLOW	1200BEIGE	—	7 lbs. (3.2 kg.)	13 x 13 x 20 (33.1 x 33.1 x 50.8 cm)



Try these related products

- 1. Plastic Protective Parking Stop
1790Y
- 2. Cease-Fire® Waste Receptacle for Cigarette Disposal
26626K
- 3. Rigid-Lock® QuickBerm®
28524
- 4. Outdoor Flammable Storage Cabinet
814520

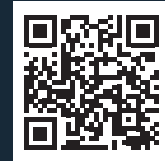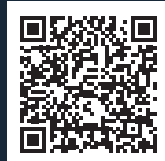

Outdoor Ashtrays

(800) 798-9250 • Justrite.com • Eagle.justrite.com

As a leader in safety, the Justrite Safety Group includes these family of safety brands:

