



*their safety is essential.*  
 Products made to work hard—and built to last.


## OptiWash™ 10-Gallon Gravity-Fed Eye Wash Station

Don't risk safety, even in remote locations

This self-contained, wall mounted, eye wash is suitable wherever continuous water isn't available—no plumbing needed. The gravity-fed eye wash station supplies a continuous, controlled flow of a minimum 1.5 LPM (0.4 GPM) for 15 minutes, meeting the ANSI Z358.1 standard.

A retrofittable insulated or heated jacket is available to provide a consistent water temperature whatever the climate.

- Slimline design with handles to aid installation
- Delivery manifold drains unused water reducing the risk of stagnation
- High-visibility orange color is easy to identify in emergency situations
- Simple to use with pull-down activation handle
- Easy to maintain—wide fill opening with threaded cap enables quick inspection, cleaning and filling
- Wall mounting bracket included
- Meets ANSI Z358.1 and EN15154 requirements

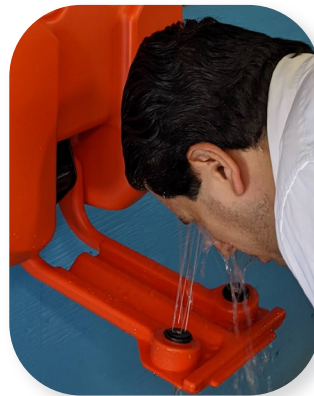

Description	Capacity US Gallons / Liters	Operating Duration (min)	H x W x D	Water Flow per Minute US Gallons / Liters	Product Weight Full/Empty	Approv/Lstg Regulation*	Model
Optiwash (one single unit)	10 / 38	15	29.5 x 18 x 7.25 in (749 x 457 x 184 mm)	0.4 / 1.5	93 lbs (42 kg) 13 lbs (5.8 kg)	AN, ENS	10GFEW
Optiwash (one pallet of 20 units)			60.5 X 40 X 48 in (1536 x 1016 x 1219 mm)				10GFEWP

\*AN = Meets or exceed American National Standards Institute (ANSI) Z358.1; ENS = Complies with European standard for showers, EN15154

An insulated or heated jacket is the perfect accessory to maintain a tepid temperature within the OptiWash™ eye wash station.

- Insulated jacket offers frost protection and reduces the effects of solar radiation
- Simple to fit to the OptiWash via the hook and loop fastenings and draw cords
- 10ft power cord with GFCI plug is provided with the heated jacket, requiring a 120V power supply
- The OptiWash remains simple to activate by pulling the visible orange manifold down to the open position



## Retrofittable Jackets

Description	Power Supply	Model
Insulated jacket	N/A	10GFEW-BLKT
Heated jacket	120V	10GFEW-BLKT-HT

**Additive Solution** - preserves water to eliminate bacteria and avoid additional eye damage. One bottle preserves up to 20 US gallons of water for up to 120 days.

Description	Packaging	Model
Eyewash Additive (USA Version)	4 x 8 oz bottles, with FDA compliant label	ADDR4PKUS
Eyewash Additive (Canada Version)	4 x 8 oz bottles, with tri-lingual label	ADDR4PKCAN



For further information visit us online at [hughes-safety-showers.com](http://hughes-safety-showers.com)