
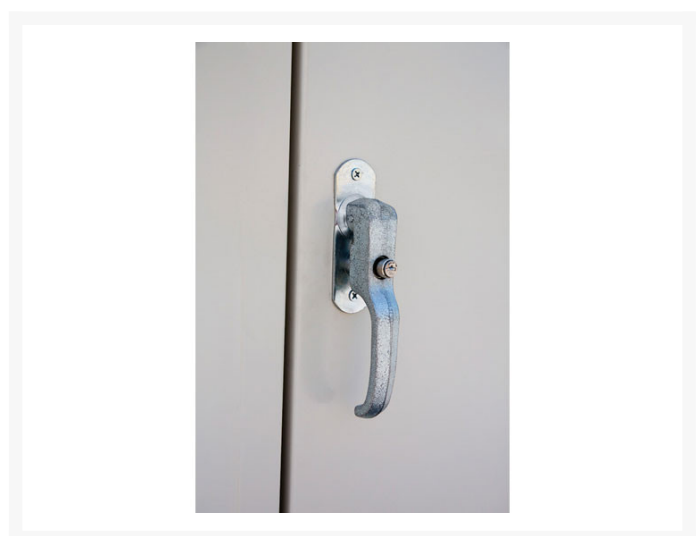


# 4-Drum, Explosion Relief Panels, Non-Combustible Outdoor Safety Locker - 911041

## Product Images

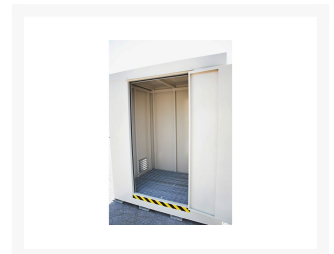

## Short Description

---

- Safe and secure hazardous/chemical storage solution
- Explosion relief panels designed to release at 20 psf
- Rugged heavy gauge steel construction
- Meets EPA, NFPA 30 and NFPA 1 requirements; FM-approved
- Customizable with a variety of optional features and accessories

## Description

---

Protect people and the environment and meet insurance requirements by storing hazardous materials in rugged, FM-approved Outdoor Safety Lockers.

Featuring non-combustible construction with heavy gauge steel and built-in secondary containment, every locker is fully compliant to meet EPA 40 CFR, NFPA 30 and NFPA 1 regulations. Proper chemical storage reduces poison hazards and accidents, minimizes contamination of chemicals, and prevents unwanted, costly fines.

Each locker features natural draft ventilation, NFPA 704 diamond decal for content identification, anchoring plates for hold down protection, and multiple static grounding connections for maximum safety. Forklift channels permit easy relocation.

Choose explosion relief panels for the storage of highly volatile Class 1A or dispensing of Class 1A and 1B flammables as defined by NFPA – always check with the local authority having jurisdiction to ensure safety by following all local regulations, including proper setback requirements.

## Specifications

---

Model No	911041
UPC	697841158504
International Model No.	911041
Color	Bone
Material Specifications	Steel
FM Approval	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
EPA Compliance	Yes
Dimensions, Exterior	77.5" H x 67" W x 62" D 1969mm H x 1702mm W x 1575mm D
Dimensions, Interior	62" H x 54" W x 54" D 1575mm H x 1372mm W x 1372mm D
55-Gallon Drum Capacity	4
Base Capacity, lbs	4000
Base Capacity, kg	1814.4
Number of Doors	1
Door Type	Standard
Door Hinge	Right
Explosion Relief Panels	(1) - 48-in x 48-in
Door Height inch	51
Door Width inch	42
Door Height mm	1295
Door Width mm	1067
Sump Capacity - Gallons	99
Sump Capacity - liters	376

Sump Depth - inch	7.0
Sump Depth - mm	178
Storage Capacity cubic feet (Int Volume)	105
Storage Capacity cubic meters (Int Volume)	3.0
Net Weight, lbs	1347.0
Net Weight, kg	611.0