


55 Gallon, 1 Drum Vertical, 1 Shelf, 2 Doors, Self-Close, Flammable Cabinet w/ Drum Rollers, Sure-Grip® EX, White - 896275

Product Images

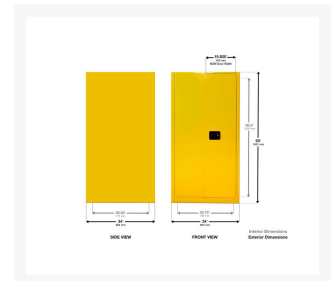

Short Description

- Safely store solvent filled drums
- Available in many styles and sizes
- Manual-close or self-close doors
- FM-approved

Description


For storage of larger quantities of flammable solvents, the heavy-duty Drum Safety Cabinet is available in many styles and sizes. Built to the same high standards as the smaller Classic Safety Cabinets, a reinforced liquid-tight sump contains spills. An array of drum accessories and equipment is available to ensure safety and convenience when storing and handling drums of hazardous materials.

Use these vertical drum safety cabinets to safely store 30- to 55-gallon (110- to 200-L) drums. The removable, adjustable, half-depth shelf provides enough head space to accommodate a drum with a pump or funnel so the cabinet can be used as a pumping or waste accumulation station, and also allows you to store Class III materials or spare accessories. Available with or without roller assemblies to easily move heavy drums. FM approved.

Specifications

Model No	896275
UPC	697841114760
International Model No.	896275
Color	white
Pallet Quantity	1
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Capacity	55 gallon
Liter Capacity	200
Number of Doors	2
Door Type	Self-close
Number of Shelves	1
Adjustable Shelves	Yes
Dimensions, Exterior	65" H x 34" W x 34" D
	1651mm H x 864mm W x 864mm D
Dimensions, Interior	60.5" H x 30.8" W x 30.3" D
	1537mm H x 781mm W x 771mm D
Height (Inches)	65
Width (Inches)	34
Depth	34
Net Weight, lbs	355.0
Net Weight, kg	161.0

Prop 65

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.