


55 Gallon, 1 Drum Horizontal, 2 Doors, Self-Close, Flammable Cabinet with Cradle Track, Sure-Grip® EX, Yellow - 899320

Product Images

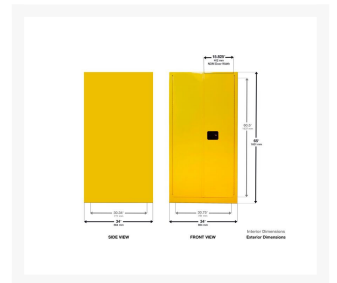

Short Description

- Use for drum storage or as a dispensing station
- For use in gravity-flow dispensing applications
- FM-approved
- Ten-year warranty

Description


For storage of larger quantities of flammable solvents, the heavy-duty Drum Safety Cabinet is available in many styles and sizes. Built to the same high standards as the smaller Classic Safety Cabinets, a reinforced liquid-tight sump contains spills. An array of drum accessories and equipment is available to ensure safety and convenience when storing and handling drums of hazardous materials.

Safely house horizontal drums for use in gravity-flow dispensing applications. The interior provides space for a drip-can and includes tracks to guide drum cradle (sold separately below) into position. Self-close doors shut and latch automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents. Cabinets are FM approved and come with a ten-year warranty.

Specifications

Model No	899320
UPC	697841115170
International Model No.	8993201
Color	Yellow
Pallet Quantity	1
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Capacity	55 gallon
Liter Capacity	200
Number of Doors	2
Door Type	Self-close
Adjustable Shelves	No
Dimensions, Exterior	50" H x 30" W x 48" D
	1270mm H x 762mm W x 1219mm D
Dimensions, Interior	46.4" H x 27" W x 44.8" D
	1178mm H x 686mm W x 1137mm D
Height (Inches)	50
Width (Inches)	30
Depth	48
Net Weight, lbs	325.0
Net Weight, kg	147.4

Prop 65

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.