




# 45 Gallon, 2 Shelves, 2 Doors, Self-Close, Flammable Waste Cabinet, Sure-Grip® EX, White - 8945253

## Product Images



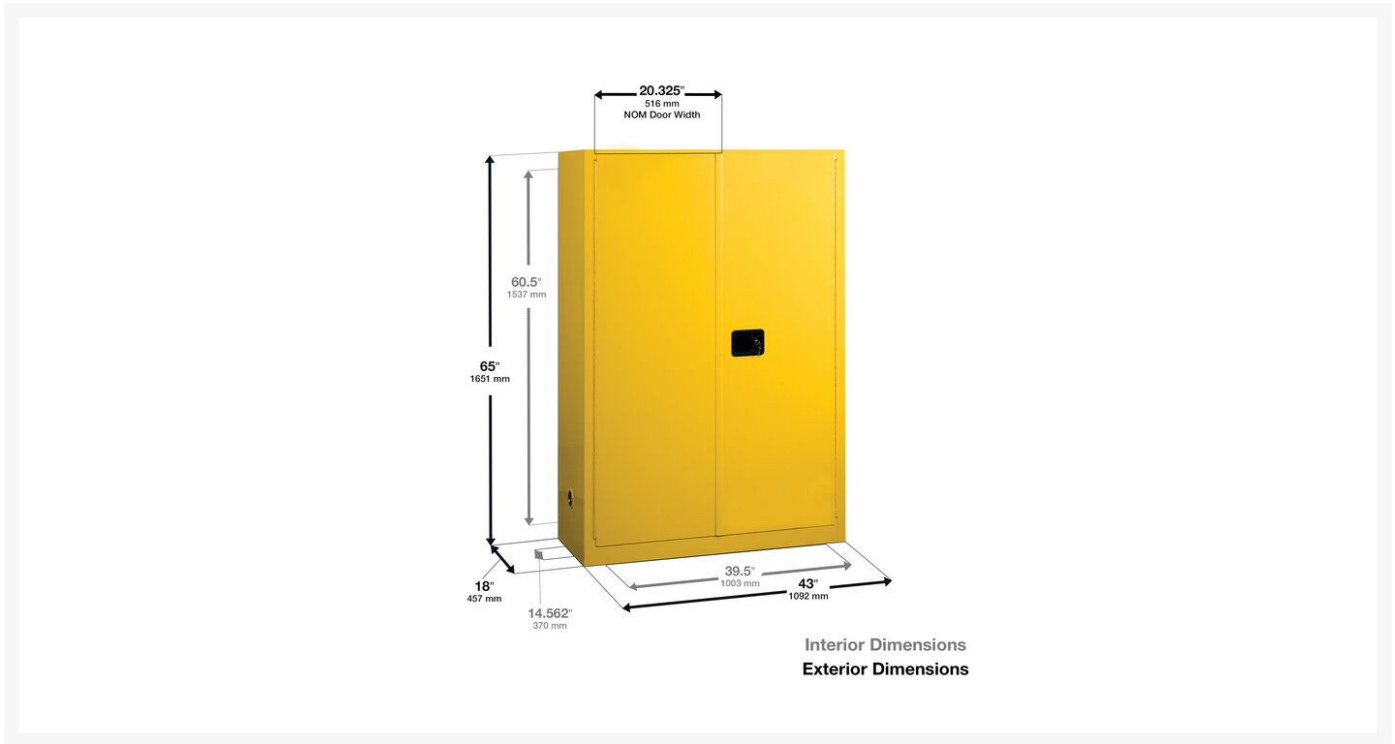

## Short Description

---

- Ideal solution for temporary collection and segregation of waste liquids
- Large warning labels clearly identify contents
- FM-approved
- Ten-year warranty

## Description

---

White Safety Cabinets for Flammable Waste are the solution for temporary collection and segregation of waste liquids. Large warning label "Flammable Waste" clearly identifies contents. Made to the same exacting standards as flammable safety cabinets, including double-wall construction, dual vents, grounding wire connections, adjustable shelves, leakproof sills, three-point self-latching doors and leveling feet.

Self-close doors shut and latch automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents. Cabinets are FM approved and come with a ten-year warranty.

Looking for a custom safety cabinet? [Request a quote here](#) for your storage requirements.

## Specifications

---

Model No	8945253
UPC	697841113923
International Model No.	89452531
Color	white
Pallet Quantity	2
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Capacity	45 gallon
Liter Capacity	170
Number of Doors	2
Door Type	Self-close
Number of Shelves	2
Adjustable Shelves	Yes
Dimensions, Exterior	65" H x 43" W x 18" D
	1651mm H x 1092mm W x 457mm D
Dimensions, Interior	60.5" H x 39.5" W x 14.6" D
	1537mm H x 1003mm W x 370mm D
Height (Inches)	65
Width (Inches)	43
Depth	18
Net Weight, lbs	272.0
Net Weight, kg	123.4

## Prop 65

---

**⚠️WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).