


60 Gallon, 5 Shelves, 2 Doors, Manual Close, Paint Safety Cabinet, Sure-Grip® EX, Yellow - 894510

Product Images



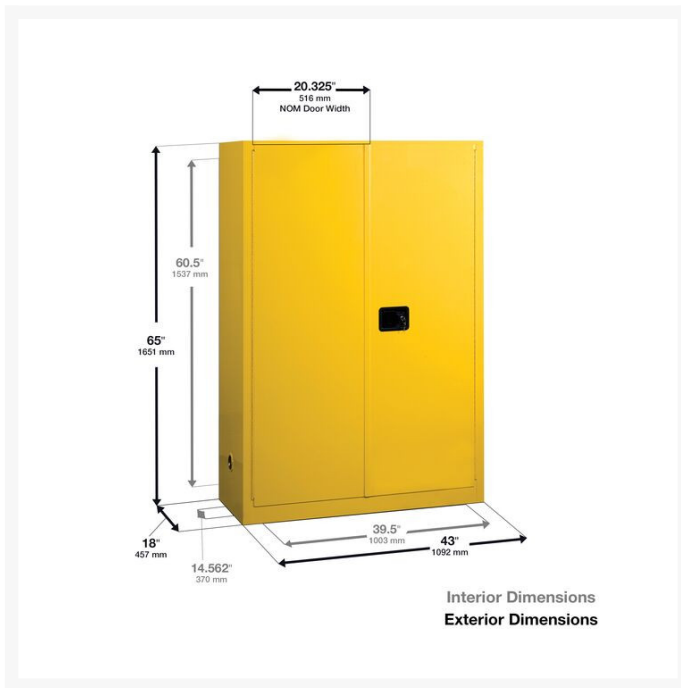

Short Description

- Separate and identify Class III combustibles
- Safe storage for paints and inks
- 18-gauge thick double-wall, welded steel
- Meet OSHA and NFPA standards; FM-approved
- Ten-year warranty

Description

Easily separate and identify Class III combustibles using these red safety cabinets. Adjustable shelves accommodate many smaller paint tins, aerosols and inks found in printing, painting, furniture and motor vehicle operations. Sure-Grip® EX combustibles storage cabinets have all the same quality features as Justrite's flammable cabinets as outlined below.

Designed to meet OSHA and NFPA standards, Sure-Grip® EX cabinets are constructed of sturdy 18-gauge (1-mm) thick double-wall, welded steel with 1-1/2 in. (38-mm) of insulating air space for fire resistance. High-performance, self-latching doors close easily and securely for maximum protection under fire conditions. Fail-safe closing mechanism ensures three-point stainless steel bullet latching system works every time.

For added security, U-Loc™ handle comes with a cylinder lock and key set or accepts an optional padlock. Haz-Alert™ reflective warning labels are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Patented SpillSlope® galvanized steel shelves direct spills to back and bottom of a leakproof sump. They adjust on 3 in. (76-mm) centers for versatile storage. Cabinets also feature a leakproof 2 in. (51-mm) bottom sump, dual vents with flame arresters, four adjustable self-leveling feet, grounding connector and trilingual

warning label. Durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance.

Manual-close door(s) opens to a full 180 degrees and self-latches when pushed closed. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents.

All door styles meet OSHA and NFPA 30; self-close door styles also meet NFPA 1 and the International Fire Code.

All cabinets are FM approved and come with a ten-year warranty.

Specifications

| | |
|----------------------------|-------------------------------|
| Model No | 894510 |
| UPC | 697841113800 |
| International Model No. | 8945101 |
| Color | Yellow |
| Pallet Quantity | 2 |
| Material Specifications | 18-Gauge Steel |
| FM Approval | Yes |
| OSHA Compliance | Yes |
| Complies with NFPA Code 30 | Yes |
| Capacity | 60 gallon |
| Liter Capacity | 227 |
| Number of Doors | 2 |
| Door Type | Manual |
| Number of Shelves | 5 |
| Adjustable Shelves | Yes |
| Dimensions, Exterior | 65" H x 43" W x 18" D |
| | 1651mm H x 1092mm W x 457mm D |
| Dimensions, Interior | 60.5" H x 39.5" W x 14.6" D |
| | 1537mm H x 1003mm W x 370mm D |
| Height (Inches) | 65 |
| Width (Inches) | 43 |
| Depth | 18 |
| Net Weight, lbs | 265.0 |
| Net Weight, kg | 120.2 |