


# 60 Gallon, 5 Shelves, 1 Bi-Fold Self-Close Door, Paint Safety Cabinet, Sure-Grip® EX, Yellow - 894590

## Product Images

---



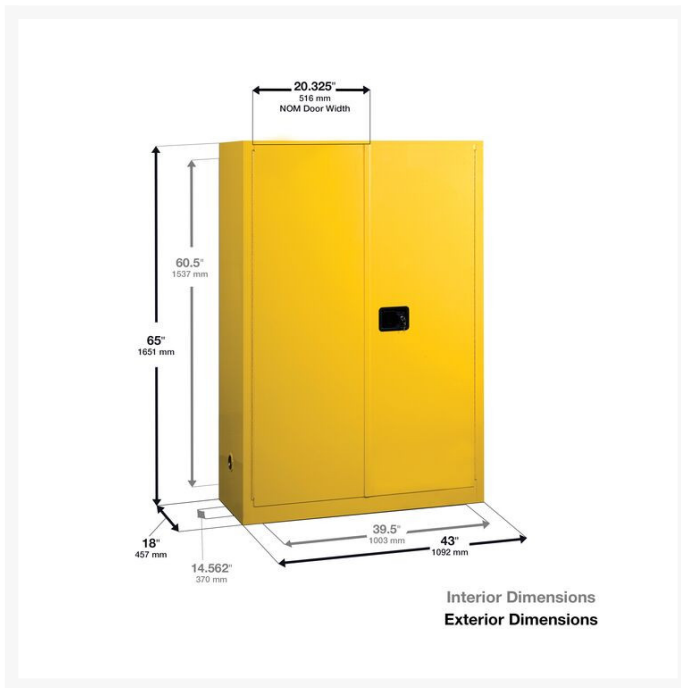

## Short Description

- Separate and identify Class III combustibles
- Safe storage for paints and inks
- 18-gauge thick double-wall, welded steel
- Meet OSHA and NFPA standards; FM-approved
- Ten-year warranty

## Description

Easily separate and identify Class III combustibles using these red safety cabinets. Adjustable shelves accommodate many smaller paint tins, aerosols and inks found in printing, painting, furniture and motor vehicle operations. Sure-Grip® EX combustibles storage cabinets have all the same quality features as Justrite's flammable cabinets as outlined below.

Designed to meet OSHA and NFPA standards, Sure-Grip® EX cabinets are constructed of sturdy 18-gauge (1-mm) thick double-wall, welded steel with 1-1/2 in. (38-mm) of insulating air space for fire resistance. High-performance, self-latching doors close easily and securely for maximum protection under fire conditions. Fail-safe closing mechanism ensures three-point stainless steel bullet latching system works every time.

For added security, U-Loc™ handle comes with a cylinder lock and key set or accepts an optional padlock. Haz-Alert™ reflective warning labels are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Patented SpillSlope® galvanized steel shelves direct spills to back and bottom of a leakproof sump. They adjust on 3 in. (76-mm) centers for versatile storage. Cabinets also feature a leakproof 2 in. (51-mm) bottom sump, dual vents with flame arresters, four adjustable self-leveling feet, grounding connector and trilingual

warning label. Durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance.

Manual-close door(s) opens to a full 180 degrees and self-latches when pushed closed. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents.

All door styles meet OSHA and NFPA 30; self-close door styles also meet NFPA 1 and the International Fire Code.

All cabinets are FM approved and come with a ten-year warranty.

## Specifications

---

Model No	894590
UPC	697841132016
Brand	Justrite
International Model No.	894590
Color	Yellow
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Capacity	60 gallon
Liter Capacity	227
Number of Doors	1
Door Type	Sliding Self Close
Number of Shelves	5
Adjustable Shelves	Yes
Dimensions, Exterior	65" H x 43" W x 18" D
Dimensions, Exterior	1651mm H x 1092mm W x 457mm D
Dimensions, Interior	60.5" H x 39.5" W x 14.6" D
Dimensions, Interior	1537mm H x 1003mm W x 370mm D
Height (Inches)	65
Width (Inches)	43
Depth	18
Net Weight, lbs	313.0
Net Weight, kg	142.0

## Prop 65

---

**⚠️WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).