


22 Gallon, 1 Shelf, 2 Doors, Self Close, Hazardous Material Cabinet, Sure-Grip® EX Undercounter, Royal Blue - 862328

Product Images



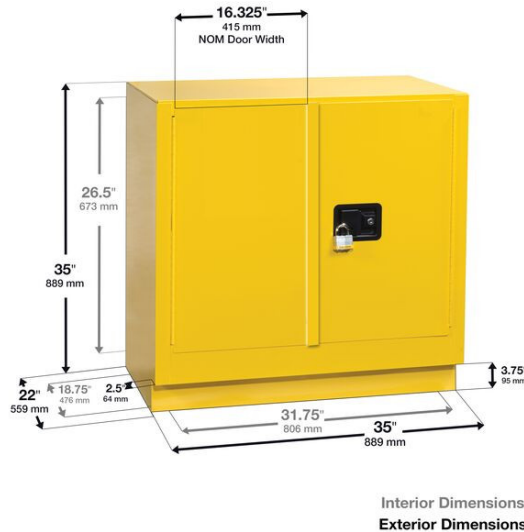

Short Description

- Take advantage of unused undercounter space
- Ensures full regulatory compliance when storing hazardous materials
- POWDER-COAT PAINT FINISH PROVIDES INCREASED CHEMICAL RESISTANCE
- Self-close doors
- All epoxy baked-on powder-coat finish provides increased chemical resistance
- Complies with NFPA 1, NFPA 400 and the International Fire Code
- FM-approved

Description

Safely store hazardous materials under a workbench or lab counter for quick and easy access with these Justrite Undercounter Hazardous Material Safety Cabinets, which have the same quality safety features as the cabinets for flammables. All models come with double-wall construction, dual vents, grounding wire connections, adjustable shelves, leakproof sills, three-point self-latching doors and leveling feet. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents.

Additionally, they include polyethylene trays that sit on top of galvanized steel shelves and a separate polyethylene liner for the bottom sump to resist aggressive chemicals. Easily remove the liner for quick cleaning of drips and leaks. An all epoxy baked-on powder-coat finish, inside and out, provides increased chemical resistance.


Exclusive to Justrite, each cabinet comes with a "Hazardous - Keep Fire Away" label, as well as a pack of ten application-specific labels to choose from and apply to the cabinet in order to indicate its contents.

Cabinets comply with NFPA 1, NFPA 400 Hazardous Material Code, and the International Fire Code. Cabinets are FM approved and come with a ten-year warranty.

Specifications

Model No	862328
UPC	697841154582
International Model No.	8623281
Color	Royal Blue
Pallet Quantity	2
Material Specifications	18-Gauge Steel
FM Approval	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Complies with NFPA 400	Yes
Capacity	22 gallon
Liter Capacity	83
Number of Doors	2
Door Type	Self-close
Number of Shelves	1
Adjustable Shelves	Yes
Dimensions, Exterior	35" H x 35" W x 22" D
	889mm H x 889mm W x 559mm D
Dimensions, Interior	27.4" H x 31.8" W x 18.8" D
	695mm H x 806mm W x 476mm D
Height (Inches)	35
Width (Inches)	35
Depth	22
Net Weight, lbs	158.0
Net Weight, kg	71.7

Prop 65

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.