


17 Gallon, 1 Shelf, 2 Doors, Self Close, Hazardous Material Cabinet, Sure-Grip® EX Piggyback, Royal Blue - 861728

Product Images

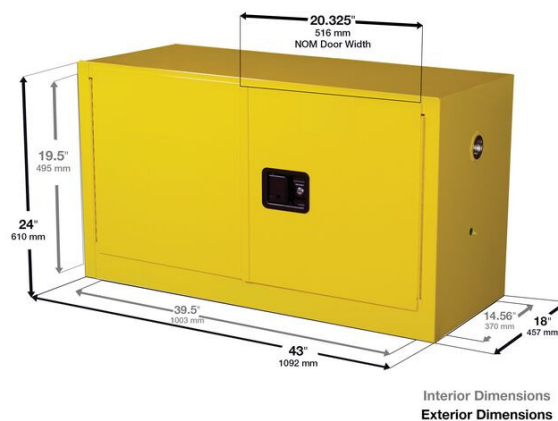

Short Description

- Expand storage and safely segregate hazardous materials
- Ensures full regulatory compliance
- Self-close doors
- Powder-coat finish provides increased chemical resistance
- Complies with NFPA 1, NFPA 400 and the International Fire Code
- FM-approved

Description

Designed to mount on top of our standard 30- and 45-gallon (114- and 170-L) safety cabinets, these Piggyback cabinets create a safe storage space without taking up any valuable floor space. Cabinets can also be used independently as a wall-mount unit or on a countertop.

Justrite Piggyback Hazardous Material Safety Cabinets have the same quality safety features as the cabinets for flammables. All models come with double-wall construction, dual vents, grounding wire connections, adjustable shelves, leakproof sills, three-point self-latching doors and leveling feet. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents.

Additionally, they include polyethylene trays that sit on top of galvanized steel shelves and a separate polyethylene liner for the bottom sump to resist aggressive chemicals. Easily remove the liner for quick cleaning of drips and leaks. An all epoxy baked-on powder-coat finish, inside and out, provides increased chemical resistance.


Exclusive to Justrite, each cabinet comes with a "Hazardous - Keep Fire Away" label, as well as a pack of ten application-specific labels to choose from and apply to the cabinet in order to indicate its contents.

Cabinets comply with NFPA 1, NFPA 400 Hazardous Material Code, and the International Fire Code. Cabinets are FM approved and come with a ten-year warranty.

Specifications

| | |
|---------------------------------------|------------------------------|
| Model No | 861728 |
| UPC | 697841154568 |
| International Model No. | 8617281 |
| Color | Royal Blue |
| Pallet Quantity | 2 |
| Material Specifications | 18-Gauge Steel |
| FM Approval | Yes |
| Complies with International Fire Code | Yes |
| Complies with NFPA Code 30 | Yes |
| Complies with NFPA 1 Fire-Code | Yes |
| Complies with NFPA 400 | Yes |
| Capacity | 17 gallon |
| Liter Capacity | 64 |
| Number of Doors | 2 |
| Door Type | Self-close |
| Number of Shelves | 1 |
| Adjustable Shelves | Yes |
| Dimensions, Exterior | 24" H x 43" W x 18" D |
| | 610mm H x 1092mm W x 457mm D |
| Dimensions, Interior | 19.5" H x 39.5" W x 14.6" D |
| | 495mm H x 1003mm W x 370mm D |
| Height (Inches) | 24 |
| Width (Inches) | 43 |
| Depth | 18 |
| Net Weight, lbs | 131.5 |
| Net Weight, kg | 59.6 |

Prop 65

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.