


1 Gallon Steel Safety Can for Kerosene, Type I, Flame Arrester, Blue - 7110300

Product Images





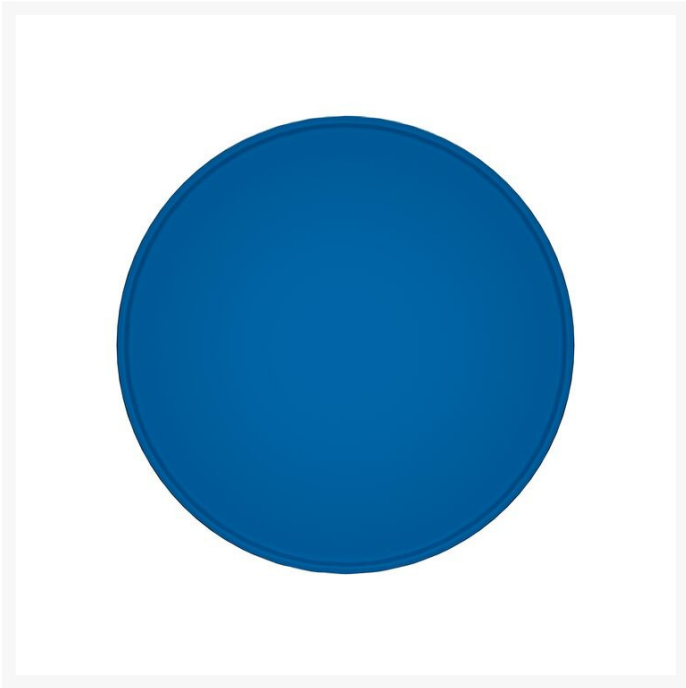

Short Description

- Color coding avoids accidents
- Self-closing lid controls spills
- Leakproof, auto-venting lid prevents explosion
- Approved by FM, UL/ULC, and TUV; also meets OSHA and NFPA requirements

Description

Designed with a single spout for filling and pouring, the sealed lid features automatic positive-pressure relief that vents between 3 and 5 psig (0.2 and 0.35 bar) to guard against rupture or explosion.

Made from high-grade coated steel, each can is tested to guarantee 100% leakproof construction. The tough powder-coat finish resists chemicals and stands up to demands of rigorous use. Each Justrite safety can is equipped with a stainless steel flame arrester which dissipates heat to stop flashback ignition. Cans up to 1 quart (1L) feature a trigger-release handle, while larger capacities have a swinging handle to greatly ease carrying of heavier loads.

Use a Type I safety can funnel to pour into smaller openings. This polypropylene funnel attaches to the spout neck of Type I Safety cans that are sized 1-gallon (4L) and larger. The two-position funnel folds down for when you fill or store the can, and stays up for when you pour. Large rounded bowl provides protection from splashing and spillage. Durable construction holds up to heavy use.

Specifications

Model No	7110300
UPC	697841139930
Brand	Justrite
International Model No.	7110300
FM Approval	Yes
UL Approval	Yes
ULC Approval	Yes
TUV Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Meets California Requirements	Required in California, CCR Title 8, § 1930(a)(1) CAL/OSHA; Exempt under CCR Title 13 § 2467.3(c)
Color	Blue
Material Specifications	Steel
Dimensions, Exterior	11" H x 9.5" Outer Dia.
Dimensions, Exterior	279mm H x 241mm Outer Dia.
Capacity	1 gallon
Liter Capacity	4
Fill/Pour Hole inch	1.58
Fill/Pour Hole mm	40
Net Weight, lbs	4.0
Net Weight, kg	1.8