


1 Gallon Steel Safety Can for Oil, Type I, Flame Arrester, Green - 7110400

Product Images





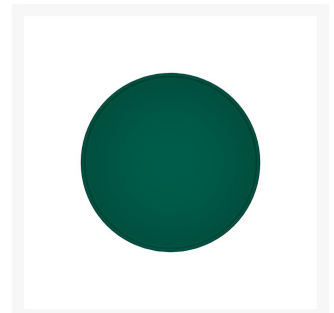

Short Description

- Color coding avoids accidents
- Self-closing lid controls spills
- Leakproof, auto-venting lid prevents explosion
- Approved by FM, UL/ULC, and TUV; also meets OSHA and NFPA requirements

Description

Designed with a single spout for filling and pouring, the sealed lid features automatic positive-pressure relief that vents between 3 and 5 psig (0.2 and 0.35 bar) to guard against rupture or explosion.

Made from high-grade coated steel, each can is tested to guarantee 100% leakproof construction. The tough powder-coat finish resists chemicals and stands up to demands of rigorous use. Each Justrite safety can is equipped with a stainless steel flame arrester which dissipates heat to stop flashback ignition. Cans up to 1 quart (1L) feature a trigger-release handle, while larger capacities have a swinging handle to greatly ease carrying of heavier loads.

Use a Type I safety can funnel to pour into smaller openings. This polypropylene funnel attaches to the spout neck of Type I Safety cans that are sized 1-gallon (4L) and larger. The two-position funnel folds down for when you fill or store the can, and stays up for when you pour. Large rounded bowl provides protection from splashing and spillage. Durable construction holds up to heavy use.

Specifications

Model No	7110400
UPC	697841139954
International Model No.	7110400
FM Approval	Yes
UL Approval	Yes
ULC Approval	Yes
TUV Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
CARB Compliance	Yes
Color	Green
Material Specifications	Steel
Dimensions, Exterior	11" H x 9.5" Outer Dia. 279mm H x 241mm Outer Dia.
Capacity	1 gallon
Liter Capacity	4
Fill/Pour Hole inch	1.58
Fill/Pour Hole mm	40
Net Weight, lbs	3.5
Net Weight, kg	1.6