


1 Quart Plastic Plunger Dispensing Can, Perforated Pan Screen Serves as Flame Arrester, Red - 14018

Product Images

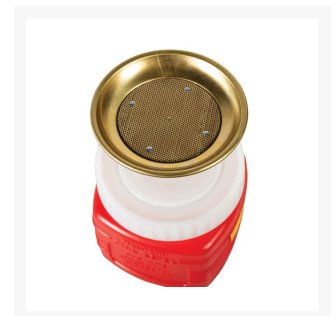

Short Description

- Moisten cleaning cloths quickly and easily
- Design leaves less liquid in bottom before having to refill
- Perforated upper pan serves as flame arrester
- Top rim features molded edge protector

Description

Dispense flammable liquids and solvents safely, without waste or exposure. Made of chemically resistant Ryton® and brass, the pump base is designed to leave less liquid in the bottom before having to refill.

Pushing down on the pump assembly fills the upper pan with liquid. Surplus liquid drains safely back into reservoir. The perforated upper pan serves as a flame arrester. Top rim has molded edge protector for smooth, trouble-free moistening.

Specifications

Model No	14018
UPC	697841005594
International Model No.	14018Z
Pallet Quantity	50
FM Approval	Yes
TUV Approval	Yes
Color	Red
Material Specifications	Polyethylene
Dimensions, Exterior	8.25" H x 5.5" Outer Dia. 210mm H x 140mm Outer Dia.
Capacity	1 quart
Dasher (Inch)	5
Dasher, mm	127
Dasher Assembly	Brass
Plunger Assembly	Brass & Ryton
Net Weight, lbs	1.5
Net Weight, kg	0.7

Prop 65

⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.