
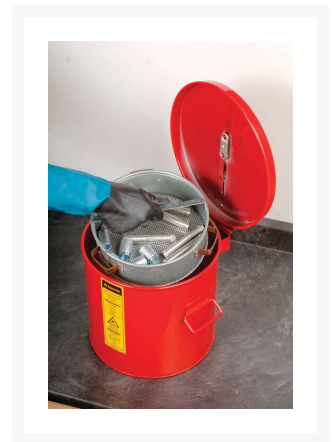


3.5 Gallon, Wash Tank With Basket for Small Parts Cleaning, Self-Close Cover with Fusible Link, Steel, Red - 27713

Product Images

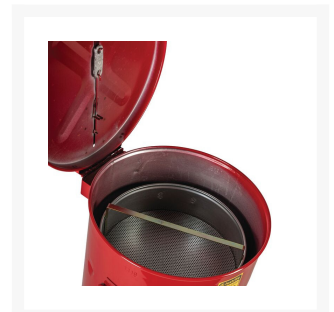

Short Description

- Simplify small parts cleaning
- Portable
- Self-closing cover
- 24-gauge steel

Description

Wash Tanks are designed to simplify small parts cleaning. An integral parts basket facilitates washing quantities of small parts quickly. Both the can and basket are made of sturdy 24-gauge, lead-free coated steel. After cleaning, the basket is positioned at the top of the tank to allow solvent to drain. Cover is equipped with a self-closing mechanism and fusible link which melts at 165°F (74°C) to close the cover in case of fire.

Specifications

Model No	27713
UPC	697841010727
International Model No.	27713
FM Approval	Yes
TUV Approval	Yes
Color	Red
Material Specifications	Steel
Dimensions, Exterior	13" H x 13.75" Outer Dia. 330mm H x 349mm Outer Dia.
Capacity	3.5 gallon
Liter Capacity	13
Net Weight, lbs	9.3
Net Weight, kg	4.2

Prop 65

⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.