


5 Gallon Heavy Duty Cigarette Butt Can, Plastic Topper, Steel Base and Neck, Red - 26811R

Product Images



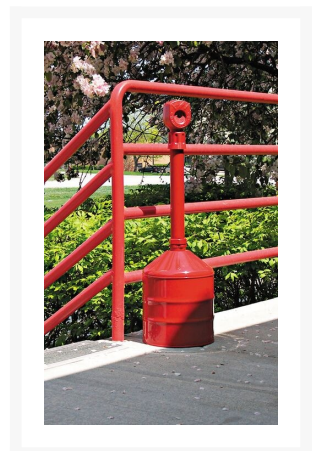

Short Description

- ADA Compliant
- Made with fire-safe galvanized steel
- Self-extinguishing design
- Simple three-step assembly
- Easy to maintain
- Suitable for factories, alleyways and more

Description

For a more stable way to keep cigarette butts away from the eyes of the public, the Heavy Duty Cigarette Butt Can in Safety Red (model 26811R) is a slim stylized outdoor ashtray that can suit any establishment. It is perfect for factory floors, backdoor entrances, or repair shops. This ashtray is ADA compliant, measuring at 38.5 in (980mm) tall and 11.5 in (292 mm) in base diameter.

Its neck and base are made of a fire-safe galvanized steel, finished with a coat of red-colored tough powder paint to give it resistance against rust. The head topper, made with flame-retardant polyethylene, keeps rain out and discourages other waste while giving a clear opening for cigarette litter. Its innovative self-extinguishing design helps reduce the risk of fire to your establishment and offers maximum convenience to you and your visitors.

The double-drip interior of this ashtray will stop tar condensation from reaching the outside, saving you extra cleaning. The long neck cavity minimizes clogging so butts can reach the base with ease, and with its ability to hold up to 5 gal (19 l) of butts, it's amazing that it can still fit into tight spaces thanks to its compact design.

Model 26811R is designed to be easy to maintain, with a simple three step assembly process. To open, simply untwist the compression nut where the neck meets the base. There are no tools required and no separate attachments to worry about.

Specifications

Model No	26811R
UPC	697841105423
Brand	Justrite
International Model No.	26811R
Color	Safety Red
Pallet Quantity	36
Material Specifications	Galvanized Steel
Net Weight, lbs	8.0
Net Weight, kg	3.6
Dimensions, Exterior	38.5" H x 11.5" Outer Dia.
Dimensions, Exterior	978mm H x 292mm Outer Dia.
Capacity	5 gallon
Liter Capacity	19
FM Approval	No