


2 Drum Accumulation Center, 24 Gallon Spill Capacity, EcoPolyBlend™, No Drain, Black - 28655

Product Images

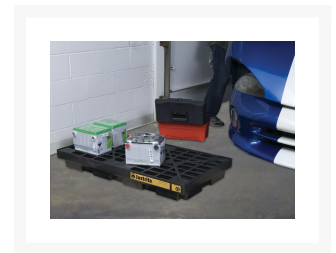

Short Description

- Keep workers safe from accidental slips indoors and avoid costly hazmat cleanup costs
- EcoPolyBlend™ black is 100% recycled
- Protects against groundwater contamination from leakage and spills
- Sump capacity of 24 gal (91 L)
- Combine 2-, 4-, 6-, and 8-drum modular units to create customized spill control systems
- Recycled content saves on oil, electricity, and landfill space

Description

The Justrite EcoPolyBlend™ Accumulation Center (2 drum, black — model 28655) offers reliable, high-performance secondary spill control and is nearly impervious to chemicals, including acids and corrosives.

This 2 drum black model measures 49 in W x 5.5 in H x 25 in D (1245 mm W x 140 mm H x 635 mm D) and is made from 100% recycled polyethylene. With a net weight of 31.1 lb (14.1 kg) and a load bearing capacity of 2500 lb (1134 kg), it features a seamless design to ensure any leaks or spills are captured in the sump, before they reach floor drains or create a slip hazard.

Our economical, low profile secondary containment platforms are made with sturdy, self-locating grates that are nearly 2.5 in (64 mm) thick, offering superior crack resistance and easy removal for proper cleaning. They also help the environment by using recycled, post-industrial, durable polyethylene that might have otherwise been discarded into the waste stream.

Since accumulation centers are modular, you have the ability to create a customized system that reflects your capacity needs, with optional joining clips to firmly lock units together when expanding. Sumps remain separate, but if you require a continuous sump, there is an optional Sump-to-Sump™ Drain Kit (model 28927) that joins modular centers together on-site. This also allows for full EPA and fire code compliance, as long as the combined sump capacities meet the 66 gal (250 L) target.

Why do you need it??

When spills inevitably happen, having trustworthy accumulation centers could make the difference between capturing leaks and allowing hazardous materials to reach the environment.

Environmentally-friendly EcoPolyBlend accumulation centers are the perfect secondary containment feature to stop leaks and spills from getting into the workplace. They keep small incidents under control and offer full safety compliance when used in tandem with the available joining clips and sump-to-sump drain kits.

Accumulation centers can be used for other containers, including buckets or pails that store everything from rubbing alcohols and cleaning supplies to fats and oils. These spill accumulation centers are also great to use for large industrial batteries that can leak acids and chemicals.

Specifications

Model No	28655
UPC	697841132689
International Model No.	28655
Brand	Justrite
Pallet Quantity	18
Color	Black
Material Specifications	Recycled Polyethylene
UL Environmental Approval	Yes
Percent Recycled	100
Sump Capacity - Gallons	24
Sump Capacity - liters	91
Load Bearing Capacity, lbs	2500
Load Bearing Capacity, kg	1134
Dimensions, Exterior	49" W x 5.5" H x 25" D
Dimensions, Exterior	1245mm W x 140mm H x 635mm D
Net Weight, lbs	32.0
Net Weight, kg	14.5