




45 Gallon, 2 Shelves, 2 Doors, Manual-Close, Pesticides Safety Cabinet, Sure-Grip® EX, Green - 894504

Product Images



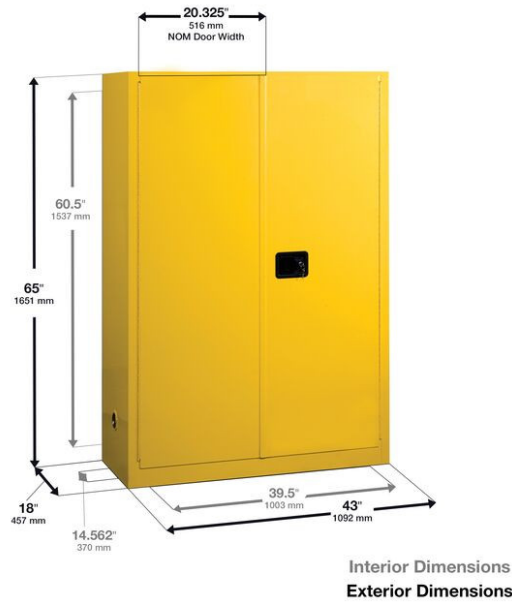

Short Description

- Improve safety and convenience and reduce the risk of accidental poisoning and fires
- Fit almost anywhere and provide protection where space is limited
- Ideal when storing lesser quantities of pesticides
- Allow segregation of liquids stored at worksite
- Meet OSHA and NFPA 30
- FM-approved

Description

Pesticides present a substantial danger to people and the environment when improperly stored. Pesticide safety cabinets allow segregation of liquids stored at the worksite, eliminating the potential for drips and spills during the transfer of pesticides. Dissimilar pesticides stored separately prevent one from contaminating another or the accidental use of the wrong chemical.

Safety cabinets that are specifically designed to house these types of chemicals offer features including sturdy double-wall, 18-gauge steel construction with 1½" of air space and dual flame-arresting vents.

The three-point automatic latch with keyed lock prevents unauthorized access. Steel shelves fitted with corrosion-resistant polyethylene trays adjust on 3" (77mm) centers to accommodate a wide variety of containers.

Manual-close door(s) opens to a full 180 degrees and self-latches when pushed closed. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique,

concealed self-closing mechanism offers obstruction-free access to contents.

All door styles meet OSHA and NFPA 30; self-close door styles also meet NFPA 1 and the International Fire Code.

All cabinets are FM approved and come with a ten-year warranty.

Specifications

Model No	894504
UPC	697841113770
International Model No.	8945041
Color	Green
Pallet Quantity	2
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Capacity	45 gallon
Liter Capacity	170
Number of Doors	2
Door Type	Manual
Number of Shelves	2
Adjustable Shelves	Yes
Dimensions, Exterior	65" H x 43" W x 18" D
	1651mm H x 1092mm W x 457mm D
Dimensions, Interior	60.5" H x 39.5" W x 14.6" D
	1537mm H x 1003mm W x 370mm D
Height (Inches)	65
Width (Inches)	43
Depth	18
Net Weight, lbs	264.7
Net Weight, kg	120.1