
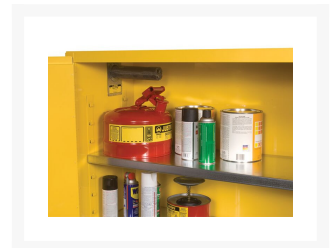


# Replacement VaporTrap™ VOC Filters for Inside Safety Cabinets, Pack of 2 - 29916

## Product Images

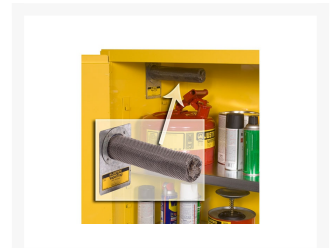

## Short Description

- Reduces inhalation exposure to VOCs
- Two pack

## Description

Install a VaporTrap™ Filter to reduce harmful VOC vapors inside your safety cabinets. Activated carbon filter medium contained in a stainless steel mesh cartridge adsorbs the volatile organic chemical vapors from cabinets storing flammable liquids. Sturdy 4" x 5-1/2" (102-mm x 139-mm) magnetized base offers flexible placement anywhere within the cabinet. Date notation area on label serves as a reminder for replacement; life cycle varies based upon vapor types and concentrations.

Note: Due to variables such as the chemical itself, its purity or its vapor pressure, temperature, humidity, charcoal age, etc., it is difficult to estimate VOC vapor absorption rates. The Justrite VaporTrap™ Carbon

Filter is not intended to be used as a substitute for using safe closed containers as required by OSHA and the EPA. It is important to clean up spills and residues from the cabinet and containers.

## Specifications

---

Model No	29916
UPC	697841145368
International Model No.	29916
Material Specifications	Stainless Steel
Dimensions, Exterior	8.75" L x 2.25" Outer Dia. 222mm D x 222mm L x 57mm Outer Dia.
Net Weight, lbs	3.5
Net Weight, kg	1.6