


Nitrogen Pass-Through with FM Approved Installation, Stainless Steel - 25974

Product Images

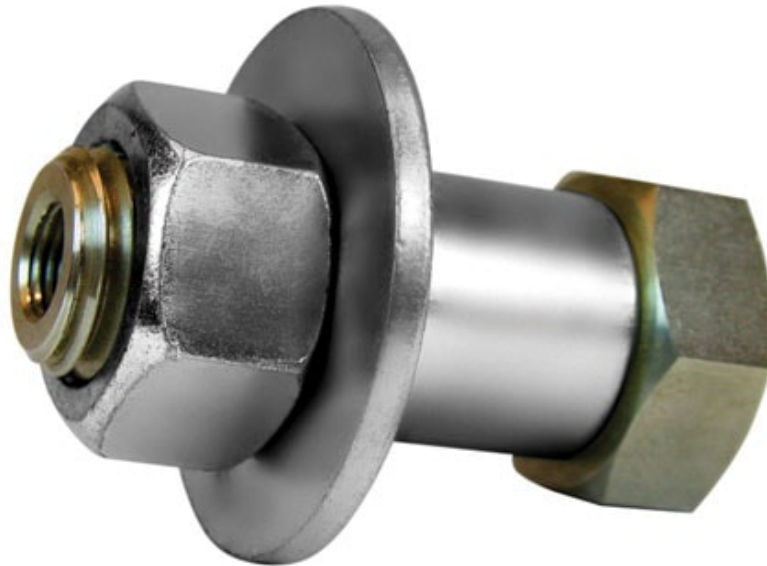

Short Description

- Not valved
- All stainless-steel construction
- Regulated pressurized nitrogen cylinder pressurizes container inside cabinet to dispense solvent at low

pressure out of cabinet

- Can be used for vacuum or pressure venting containers inside cabinets
- Factory installed and FM-Approved with purchased safety cabinet

Description

The pass-through kit (model 25974) can be used on the sides or back of flammable liquid safety cabinets. This unique system provides a means to dispense solvents with pressurized nitrogen through the wall of a cabinet, if a pressure nitrogen assist from an outside source is needed. It can also be used for vacuum or pressure venting containers inside the cabinet. The stainless-steel construction without a check valve allows flow in either direction. A ¼-in NPT (tapered) fitting is required to thread into both sides of the pass-through. Only install on the sides and back of the safety cabinet, never on the doors, bottom or top of a cabinet.

Factory installed—must be ordered with cabinet.

Note: This [TechTALK](#) has guidelines for ordering factory-installed pass-through kits for Justrite safety cabinets to maintain FM approval and our 10-year warranty.

Specifications

Model No	25974
UPC	697841008670
International Model No.	25974
FM Approval	Yes
Net Weight, lbs	0.8
Net Weight, kg	0.4