


Brass Drum Siphon Adapter No. 08311 For Draining thirty and fifty-five Gallon Drums, With Brass Self-Closing Faucet No. 08902

Product Images

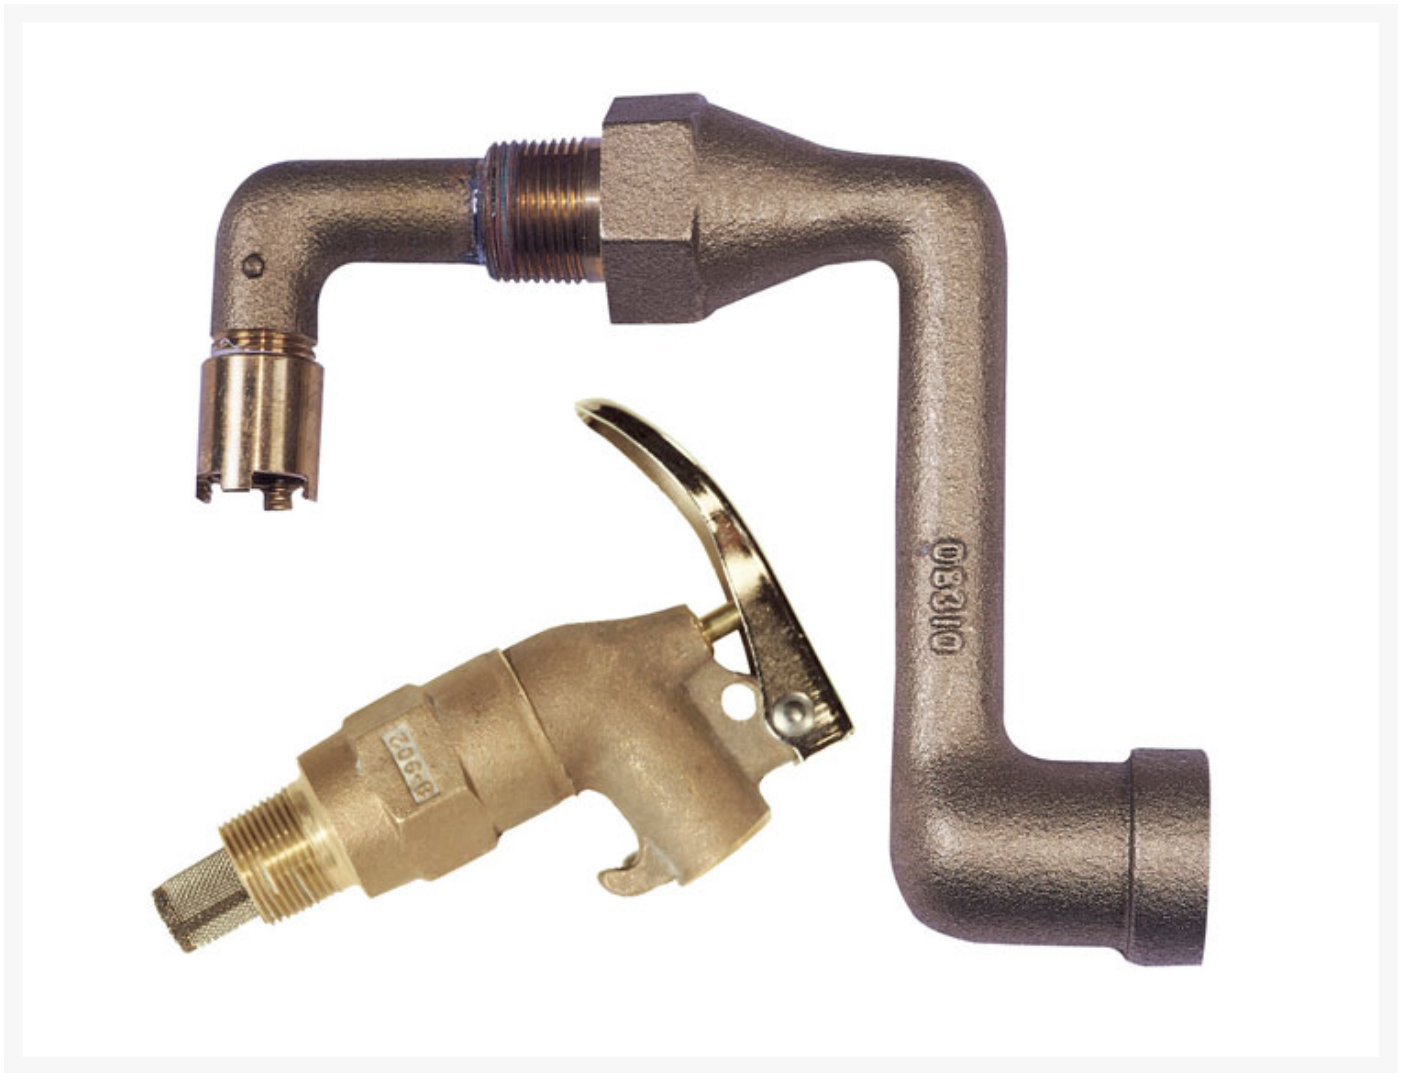

Short Description

- Brass construction
- Safely drain a horizontally stored drum down to a few ounces

- Save on costs associated with removal of hazardous liquids

Description

Avoid dangerous tipping or rolling a drum to drain its contents. Unique siphon action of the drum siphon adaptor empties residual solvents from two to three gallons (7.5- to 11-L) down to only a few remaining ounces. Solid cast brass adaptor withstands heavy use with compatible liquids. Adaptor fits into a 3/4-in (19-mm) drum bung and features an adjustable collar to accommodate bungs in various positions for maximum draining. Attach the included 3/4in (19-mm) safety drum faucet (08902) on the opposite end for safe, trouble-free dispensing.

Specifications

Model No	08308
UPC	697841056305
International Model No.	08308
Material Specifications	Brass
Wetted O-Rings	Yes
Internal Spout Thread	Yes
Cover Type / Closure Type	Self Close
Net Weight, lbs	2.5
Net Weight, kg	1.1

Prop 65

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.