


6 Gallon, Oily Waste Can, Hands-Free Self-Closing Cover, SoundGard™, Silver - 09104

Product Images



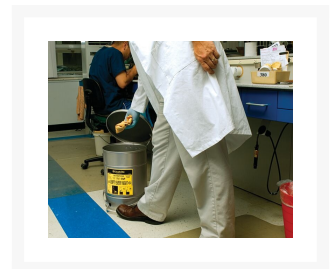

Short Description

- Dispose of oil-soaked rags
- Prevent fires caused by stray sparks or spontaneous combustion
- Lid stays closed when not in use
- Durable steel construction provides chemical resistance
- Sound muffling pad within lid reduces lid closure noise
- Ten-year warranty

Description

Rags and cloths soaked with solvents, thinners, linseed oil, combustible adhesives and other flammable liquids present a serious fire risk when improperly discarded. Lid opens to no more than 60 degrees and stays closed when not in use, isolating contents from fire sources and limiting oxygen to virtually eliminate the risk of spontaneous combustion. Round construction and elevated base allow circulation of air around can to disperse heat and reduce moisture build-up and rusting. Durable steel construction with a powder-coat finish provides chemical resistance. Ten-year warranty.

SoundGard™ oily waste cans include a sound muffling pad inside lid to significantly reduce lid-closure noise. Ideal for laboratories or anywhere it is desirable to lessen disruptive noise.

Specifications

Model No	09104
UPC	697841124349
International Model No.	09104
FM Approval	Yes
UL Approval	Yes
TUV Approval	Yes
OSHA Compliance	Yes
Color	Silver
Material Specifications	Steel
Dimensions, Exterior	15.875" H x 11.875" Outer Dia.
	403mm H x 302mm Outer Dia.
Capacity	6 gallon
Liter Capacity	23
Net Weight, lbs	8.3
Net Weight, kg	3.8