


Cease-Fire® Waste Receptacle, Safety Drum Can With Aluminum Head, 4.5 gallon

Product Images

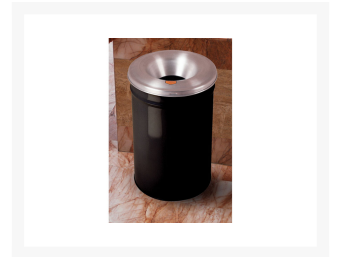

Short Description

- Around-the-clock protection against trash fires
- Specially contoured to extinguish flames in seconds
- Heavy-gauge steel with rust preventative interior coating
- Approved by FM Approvals; UL Listing on all models except 55-gallon size.

Description

Justrite's Cease-Fire® Waste Receptacles are specially contoured to direct smoke and gas from any fire inside the container, back into the combustion area, cutting off the air supply and extinguishing flames in seconds. Use for the collection of waste paper and other solvent-free combustibles. Cease-Fire® receptacles

provide around-the-clock protection against trash fires and are suitable for use in plants, hospitals, schools, offices and stores. Drums should not be filled beyond 3/4 full.

Drum heads are available in either a durable steel head with red powder-coat paint for abusive conditions or a brushed aluminum head for easy cleaning and corrosion resistance.

Specifications

Model No	26604G / 26604W / 26604K
FM Approval	Yes
UL Approval	Yes
Material Specifications	Steel
Dimensions, Exterior	14.25" H x 12.125" Outer Dia.
	362mm H x 308mm Outer Dia.
Capacity	4.5 gallon
Liter Capacity	17
Opening Diameter - inches	5
Opening Diameter - mm	127
Net Weight, lbs	4.4
Net Weight, kg	2.0

Product Options

Color:	Black
	Gray
	white