
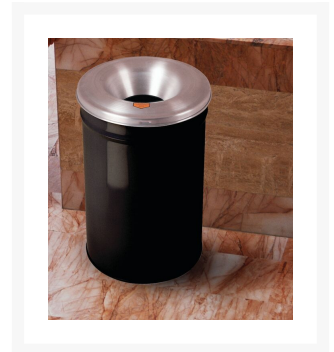


# Cease-Fire® Waste Receptacle, Safety Drum Can With Aluminum Head, 30 gallon

## Product Images

---

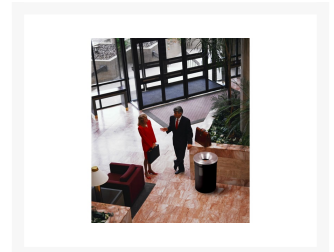

## Short Description

---

- Around-the-clock protection against trash fires
- Specially contoured to extinguish flames in seconds
- Heavy-gauge steel with rust preventative interior coating
- Approved by FM Approvals; UL Listing on all models except 55-gallon size.

## Description

---

**Justrite's Cease-Fire® Waste Receptacles** are specially contoured to direct smoke and gas from any fire inside the container, back into the combustion area, cutting off the air supply and extinguishing flames in seconds. Use for the collection of waste paper and other solvent-free combustibles. Cease-Fire® receptacles provide around-the-clock protection against trash fires and are suitable for use in plants, hospitals, schools, offices and stores. Drums should not be filled beyond 3/4 full.

Drum heads are available in either a durable steel head with red powder-coat paint for abusive conditions or a brushed aluminum head for easy cleaning and corrosion resistance.

## Specifications

---

Model No	26630G / 26630W / 26630K
FM Approval	Yes
UL Approval	Yes
Material Specifications	Steel
Dimensions, Exterior	29.75" H x 19.875" Outer Dia. 756mm H x 505mm Outer Dia.
Capacity	30 gallon
Liter Capacity	114
Opening Diameter - inches	7
Opening Diameter - mm	178
Net Weight, lbs	19.6
Net Weight, kg	8.9

## Product Options

---

Color:	Black
	Gray
	White