



Double Cylinder Hand Truck W/ Firewall & Hoist Ring, 16" Pneumatic Wheels, Rear Casters, Tool Box - 35052

Product Images

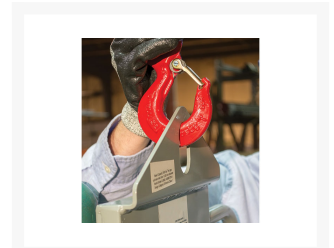

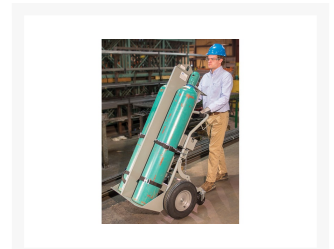

Short Description

- Steel encased Marinite® It creates a one-hour fire barrier between the fuel and oxidizer—exceeds minimum NFPA 55, NFPA 1, OSHA and CGA standards
- Locking posts and collar plates ensure total cylinder immobilization for hoisting applications
- Configured with 16-in (406-mm) steel hub pneumatic wheels with dual ball bearings for easier rolling—less effort required
- Includes wide-set dual 5-in (127-mm) swivel caster assemblies for easier, stable transport—folds flat for storage
- Rated at 600-lb (272-kg) weight capacity

Description

Safely store and transport a pair of fuel and oxidizer cylinders, common in welding applications, up to 13-in (330-mm) and 10-in (254-mm) in diameter, respectively. Constructed using 1.25-in (32-mm) diameter round steel tube with continuous welding, these durable, double-cylinder trucks provide optimum safety, strength, and longevity. Floor plate made of thick 11-gauge (3-mm) steel with safety fins prevents warping or breaking. The zero-lift height loading allows floor plate to lay flat, thereby eliminating the need to lift cylinder during loading and unloading. Caster carriage features heavy steel bars and nylon washers for smooth folding action and easy storage in tight spaces. Corrosion-resistant powder-coat finish throughout for long life and smooth handling.

Two heavy-duty 1.5- x 54-in (38-mm x 1372-mm) polypropylene support straps, lab tested to 1138-lb (516-kg), feature steel cinch buckles for secure attachment of cylinder—eliminate any cylinder rolling potential seen in chain-secured units. Included welded loop chains provide a secondary means for securing the cylinders. Exclusive bumper guard edging grips cylinder and minimizes damage to cylinder and hand truck. Triple grip push handle greatly enhances safety on top heavy loads by expanding available grip area for improved leverage and swing radius. Includes tool box attachment with integral lockable lid for torch storage.

Move hand truck easily around a construction site, into locations with poor accessibility, or from floor to floor with this hoist-equipped design. Extensive structural framing with 0.375-in (10-mm) thick hoist plate makes

these units safe when lifted by hoist rigs.

†Marinite® I is a registered trademark of BNZ Materials, Inc.

Specifications

Model No	35052
UPC	697841210097
Cylinder Capacity	2
Minimum Cylinder Diam (in)	5
Cylinder Capacity with Max Cylinder Dia	(1) 10 inch and (1) 13 inch
Hoist Ring Equipped	Yes
Locking Post Equipped	Yes
Firewall Rating	One-Hour
Tool Box/Tray	Tool Box
Rear Casters	Yes
Rear Casters (inch)	5
Rear Casters (mm)	127
Main Wheel Type	Pneumatic
Main Wheel Size (inch)	16
Main Wheel Size (mm)	406
Weight Capacity (lb)	600
Weight Capacity (kg)	272
Strap Style	Poly Cinch Strap with Steel Buckle and Chain
Straps Per Cylinder	2
Material Specifications	Steel
Complies with NFPA 1 Fire-Code	Yes
NFPA 55	Yes
OSHA Compliance	Yes
CGA	Yes
Net Weight, lbs	186
Net Weight, kg	84

Net Dimensions (W x D x H)

35 x 26 x 64 inches

889 x 660 x 1626 mm