



# Lift-and-Load Single Cylinder Hand Truck - 35054

## Product Images

---

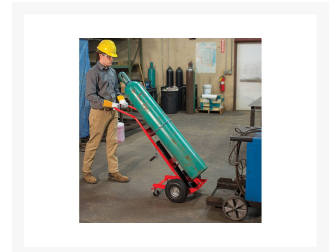

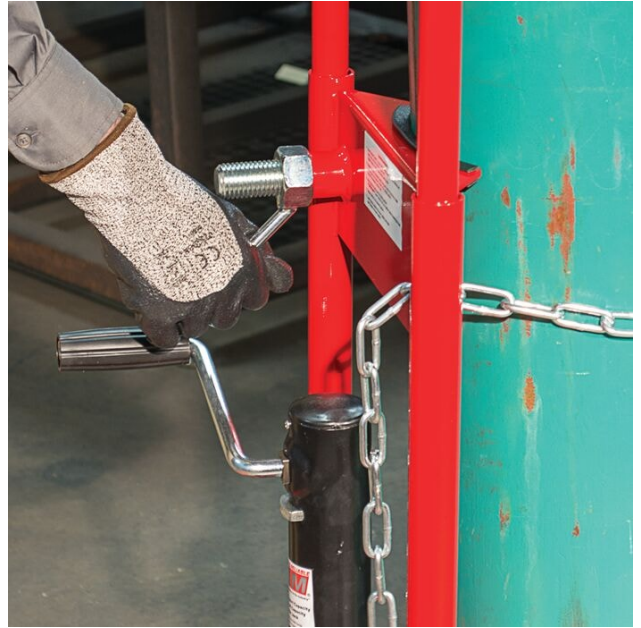

## Short Description

---

- Built-in clamping system with welded loop chain secures the cylinder for lifting and transport.
- Accepts cylinder sizes from 4- to 12-in (102- to 305-mm) diameter wide

## Description

---

Designed to lift, transport, and install gas cylinders on welding carts, platforms, pallets and in cabinets or other elevated surfaces. The manual lift system has a jack with an 11-inch (279-mm) extension geared to

make lifting easy with approximately 10 turns of the crank per vertical inch.

Includes pneumatic 10.5-in (267-mm) main wheels and wide-set, dual 3-in (5-mm) rear swivel casters for increased stability and maneuverability. Fully welded construction, protected with durable, corrosion resistant, red powder-coat finish.

## Specifications

---

Model No	35054
UPC	697841210103
Cylinder Capacity	1
Minimum Cylinder Diam (in)	4
Cylinder Capacity with Max Cylinder Dia	(1) 12 inch
Rear Casters	Yes
Rear Casters (inch)	3
Rear Casters (mm)	76
Main Wheel Type	Pneumatic
Main Wheel Size (inch)	10.5
Main Wheel Size (mm)	267
Weight Capacity (lb)	1000
Weight Capacity (kg)	454
Strap Style	Clampable Chain
Straps Per Cylinder	1
Material Specifications	Steel
Complies with NFPA 1 Fire-Code	Yes
NFPA 55	Yes
OSHA Compliance	Yes
CGA	Yes
Net Weight, lbs	69
Net Weight, kg	31
Net Dimensions (W x D x H)	22 x 20 x 56 inches
	559 x 508 x 1422 mm