


5 Wide by 3 Deep, Gas Cylinder Storage Rack, 15 Cylinder Capacity, Steel - 35178

Product Images

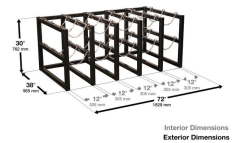

Short Description

- 12" wide cylinder bays
- Meets USGS high-hazard seismic zone requirements when properly mounted

Description

Recommended for indoor or outdoor bulk cylinder storage, barricade racks surround cylinders with 2-in (51-mm) square steel structural tubing, continuously seam welded at all junction points and sealed with exterior grade powder-coat paint for long lasting strength, durability and dependability. Tops ground smooth and capped with high-density polyethylene (HDPE) caps to prevent corrosion and injuries. Features two levels of welded steel chains for each cylinder and clasps to connect the chains to the rack, ensuring a snug fit. Pre-drilled 0.531-in (14-mm) diameter floor mounting holes included on lower tube structure. For seismic

installations, add Model 35350 S4-rated anchor bolts (not included).

Helps comply with OSHA, NFP1, NFPA 55, and CGA.

Specifications

Model No	35178
Badge	Best Seller
UPC	697841210622
Cylinder Capacity	15
Minimum Cylinder Diam (in)	8
Cylinder Capacity with Max Cylinder Dia	(15) 12 inch
Mount Type	Floor
Mount Holes	12
Mount Hole Size (inch)	0.531
Strap Style	Chain
Straps Per Cylinder	2
Material Specifications	Steel
Complies with NFPA 1 Fire-Code	Yes
NFPA 55	Yes
OSHA Compliance	Yes
CGA	Yes
High Hazard Seismic Zone	Yes
Net Weight, lbs	351
Net Weight, kg	159
Net Dimensions (W x D x H)	70 x 38 x 30 inches
	1778 x 965 x 762 mm