


Pedestal Mount, Closed ABS Bowl, Hughes Eye/Face Wash, Freeze Protected, Stainless Steel Pipe, 240V C1D2 - H45GSP-2H

Product Images

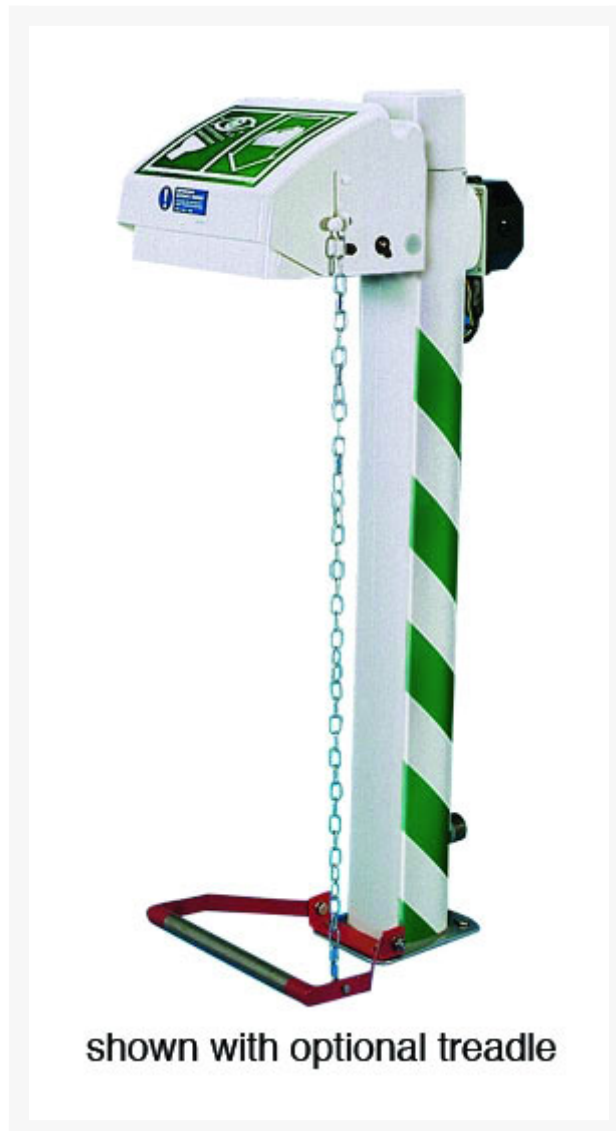

Short Description

HUGHES



Justrite Safety Group

- For cold climates with a minimum ambient operating temperature of -4°F (-20°C) or above
- Covered acrylic-capped ABS eye/face wash protects the bowl and eyewash diffusers from dust and debris
- Diffusers provide a gentle flow of aerated water and prevent further injury to the eyes
- Includes a separate universal eyewash sign for enhanced visibility
- Meets ANSI and EN 15154 standards and supports OSHA requirements

Description

This freeze protected and insulated eye/face wash is intended for use where there is a possibility of the water freezing due to extreme cold climates. It features trace tape heating with polyethylene jacket and polyurethane foam insulation to improve frost protection and strength.

Pedestal-mounted eye/face wash unit, designed at ANSI-compliant height, is generally located in open areas away from walls. These freeze protected models are trace-tape heated and insulated, suitable for use in both Class 1 Division 2 hazardous areas, as well as non-hazardous areas. Made of durable, corrosion-resistant acrylic capped ABS, the eye/face wash incorporates an integral lid connected to the water valve for automatic operation—activate by simply pulling down the lid. Easy-to-reach flow regulator valve positioned on side of bowl adjusts to suit the severity of the accident. Includes an inspection record tag for recording test and service history.

Specifications

Model No	H45GSP-2H
Color	white
UPC	805042000519
Net Weight, lbs	30.9
Net Weight, kg	14
Dimensions, Exterior	48.1" H x 14.8" W x 24.9" D 1223mm H x 375mm W x 375mm D
Water Inlet Size NPT	1-1/4 in (M)
Minimum Operating Pressure	2 bar g, 29 PSI
Maximum Operating Pressure	6 bar g, 87 PSI
Water Flow Eye/Face Liters/min	11.4
Water Flow Eye/Face US Gal/min	3
Material Specifications	Polyurethane foam insulation with a medium density polyethylene impact resistant outer casing, Eye/facewash diffusers: Chrome plated brass with stainless steel mesh.
Operating Valve Material	Chrome plated brass
Eye/Face Wash Bowl Material	Acrylic-Capped ABS Plastic
Mounting Type	Pedestal
Pipework Material	Stainless Steel
Activation Method	Pull Down on Lid
Minimum Ambient Temperature, °F	-4
Minimum Ambient Temperature, °C	-20
Maximum Ambient Temperature, °F	95
Maximum Ambient Temperature, °C	35
Electrical Equipment Classification	Class 1 Division 2, Gas Groups C & D, Temperature Code T3
Electrical Supply	240 VAC, Single Phase, 60/50 Hz

Heating Type	Trace Tape Heated and Pre-Insulated
Heating Load, Watts	36

Prop 65

⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.