


Make-A-Berm, Vented Corner, 2 inch High, 2 per Box - #28480

Product Images

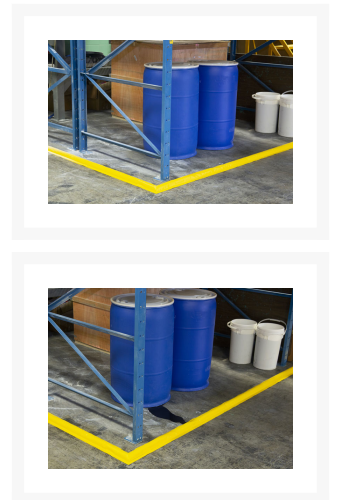

Short Description

- Corner pieces can be combined with straight pieces to create a complete containment solution.
- Contains spills and leaks around unique equipment situations.
- Semi- permanent, can easily be installed and removed.
- Durable bright yellow color for visibility.
- 1.5" and 2" are ideal for small to medium capacity containment needs.
- Flexible foam that bounces back allows for foot traffic and light wheeled traffic.
- Helps to comply with EPA for containment and spill prevention (SPCC) regulations.

Description

Make-A-Berm™ allows for spill containment to be installed around difficult to move equipment, spill-prone areas, or areas where a standard-shaped berm won't work. Vented Corner pieces are key to providing a full spill containment. These allow air to flow thru as forklift traffic and hand truck equipment is being used. The

corner pieces are easily attached to the berm pieces with the use of vinyl cement. Non-absorbent modified PVC coated fabric provides a highly resistant barrier to contain oils, gasoline, acids and other liquids.

Specifications

Model No	28480
UPC	697841042605
Color	Yellow
Material Specifications	PVC Coated Fabric
EPA Compliance	Helps comply with EPA for containment and spill prevention (SPCC)
SPCC Compliance	40 CFR 112.7 (c)
Dimensions, Exterior	2" H x 5.5" W x 11" L
	50.8mm H x 139.7mm W x 279.4mm L
Berm Shape	Rectangular
Foam Material	Open Cell Urethane
Temperature range of the material	-40degreesF- 180 degrees F
Vehicle Traffic	Small wheeled carts, Hand carts

Prop 65

⚠️WARNING: This product can expose you to chemicals including diisononyl phthalate, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.