


30 Gallon, 5 Shelves, 2 Door, Self Close, Aerosol Paint Safety Cabinet, Yellow - YPI7710X

Product Images

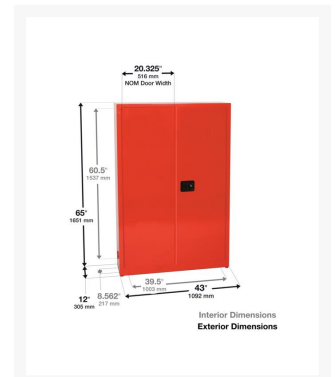

Short Description

Key Benefits

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish

- Continuous piano hinges
- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Self-Closing (135° opening)
- Concealed self-close mechanism provides obstruction-free access to top shelf space
- Self-indexing doors guarantee they will close in sequence and ensure a tight closure from top to bottom

Description

Eagle 30 Gallon, self-closing, Aerosol Can Storage Paint and Ink Safety Cabinets come with extra shelves to maximize storage space. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Includes wall-mounting brackets to prevent cabinet from tipping. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

Specifications

Model No	YPI7710X
Color	Yellow
Brand	Eagle
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Type	Self-close
UPC	48441692545
Dimensions, Exterior	1
Dimensions, Interior	39.5" W x 8.56" D x 60.5" H (100.3 x 21.7 x 153.7 cm)
Number of Doors	2
Number of Shelves	5
Lock	Yes
Gallon Capacity	30
Liter Capacity	1
Replacement Shelf Model No.	29938
Pallet Quantity	1
Shelf Depth	8.6" (21.9 cm)
Net Weight, lbs	288
Net Weight, kg	130.6
Adjustable Shelf	Yes

Prop 65

⚠️WARNING: This product can expose you to chemicals including Lead, which is known to the State of

California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.