






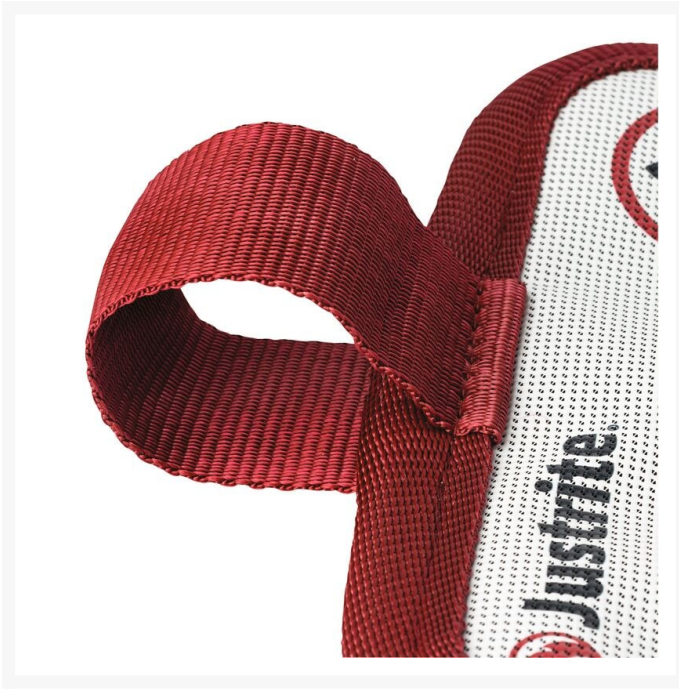


# Absorbent Pads PetroPad™ with Smart Polymers, Large – 83986

## Product Images

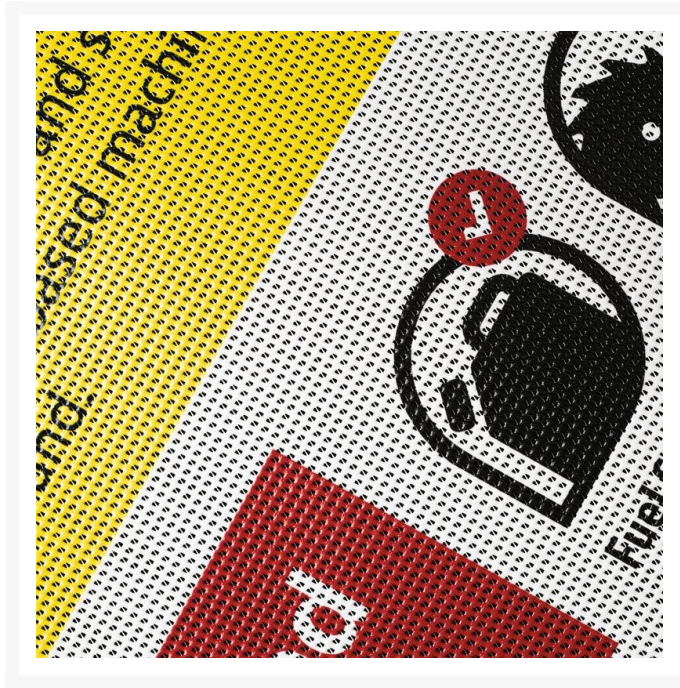

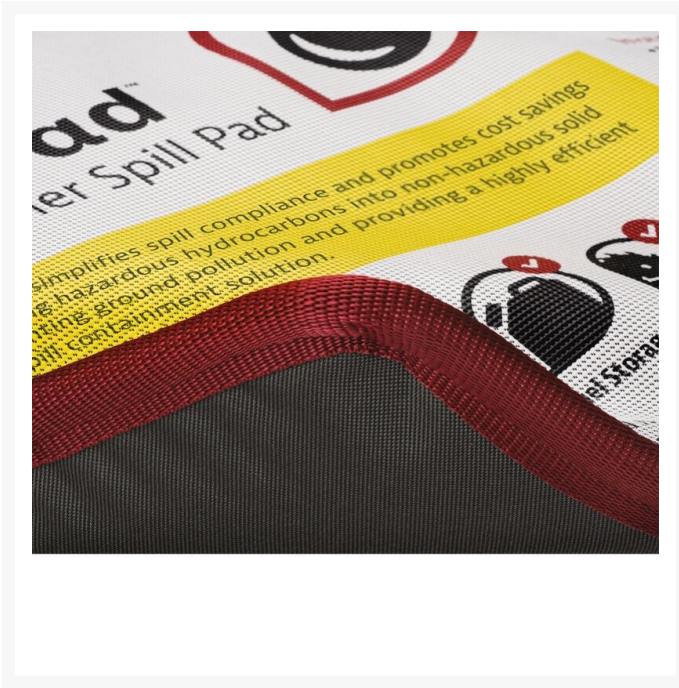

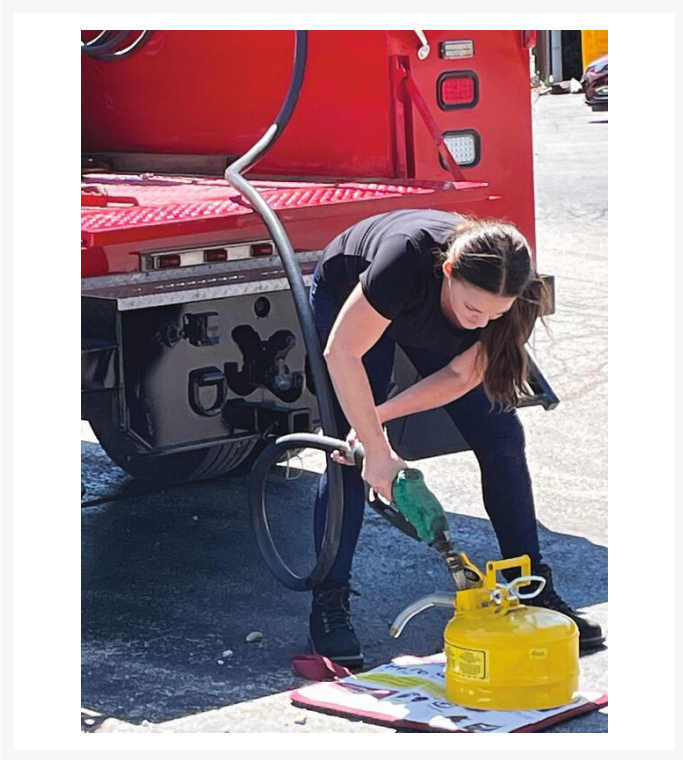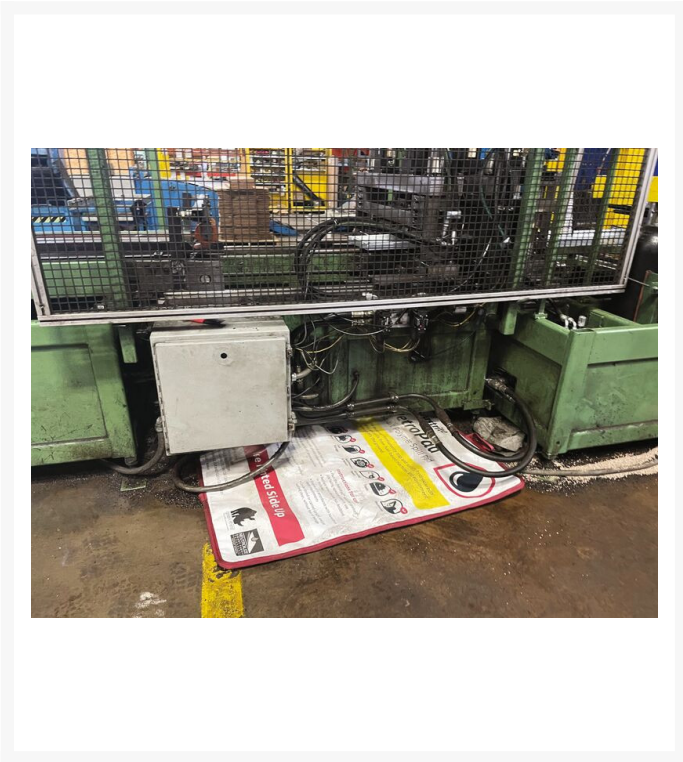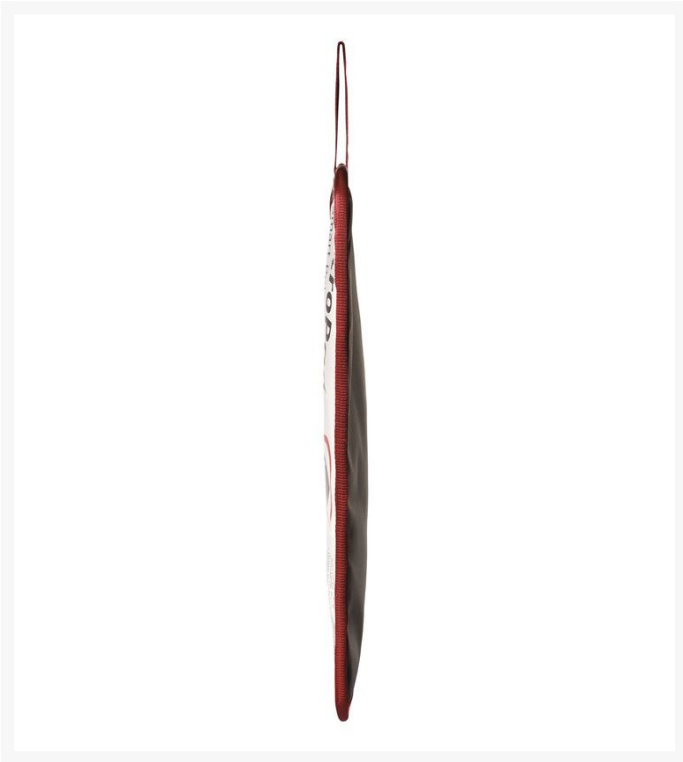

## Short Description

---



- Portable and easy to fold up and store in van/truck without fear or leakage or mess
- Absorbs and permanently solidifies hydrocarbons while allowing rainwater to pass through
- Durable material and robust construction withstand the demands of a rigorous work environment
- Easily pressure wash built-up dirt and debris without releasing hydrocarbons
- TCLP leachate test and EPA Paint Filter Test (9095B) compliant

## Description

---

Justrite PetroPad™ Smart Polymer Spill Pads are uniquely designed to absorb and permanently solidify hydrocarbons like oil, diesel and gas. The exclusive blend of polymers found in the PetroPad safely transform hazardous hydrocarbons from incidental spills and leaks into a non-hazardous solid. The large PetroPad 83986 measures 35.8 in W x .63 in D x 53.9 in H (91 cm W x 1.6 cm D x 137 cm H) with a capacity of up to 5.3 gal (20.2 l).

Reusable, portable, washable and easy to dispose, the PetroPad is the most flexible and cost-efficient solution for the safe handling and the disposal of hazardous hydrocarbon waste. Rainwater flows through the absorbent pad while permanently solidifying hydrocarbons into a non-toxic solid, helping reduce harmful environmental pollution. The PetroPad is TCLP leachate test and EPA Paint Filter Test (9095B) compliant.

## Safe and Portable Spill Containment Solution

The PetroPad uses a smart polymer embedded in a geotextile fabric. This innovative technology quickly absorbs and solidifies hydrocarbons, trapping the pollutants inside the pad. This prevents the outflow of uncontaminated water to run through it, reducing the volume of pollution and hazardous waste for disposal.

The large PetroPad model 83986 can contain up to 5.3 gallons of hydrocarbons, making it an ideal incidental spill solution for use with small mobile generators, pumps and maintenance and repairs. Its robust construction and durable materials stand up to rough handling and treatment. To remove built-up dirt and debris, simply pressure wash it.

Justrite is the exclusive supplier of PetroPad spill pads in the United States and the Americas, through a partnership with Green Rhino, a leading supplier of pollution prevention products based in the UK.

Note: Dispose of in accordance with all local, state and federal environmental regulations

## Specifications

---

Model No	83986
UPC	697841271562
International Model No.	83986
Brand	Justrite
Color	White
Material Specifications	Smart Polymer Liner, vinyl
Liter Capacity	20.2
Dimensions, Exterior	35.8"W x 53.9"L x 0.63"D
Dimensions, Exterior	910mm x 1370mm x 16mm
Net Weight, lbs	7.1
Net Weight, kg	3.2

## Prop 65

---

**⚠️WARNING:** This product can expose you to chemicals including Diisononyl Phthalate, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).