


Classic Flammable Cabinets

Product Images



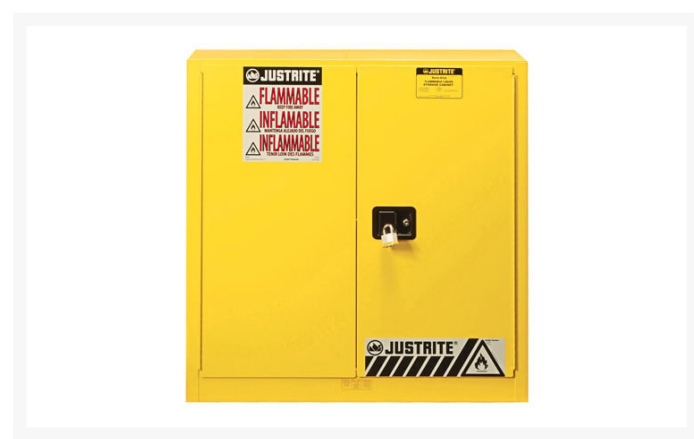

Short Description

- Superior Fire Resistance: 18-gauge steel double-walls with 1.5 inches of insulation
- Compliance and Certification: Meets OSHA and NFPA standards, FM approved, and comes with a 10-year warranty
- Versatile Configurations: Available in multiple capacities and colors (yellow, red, gray, White)
- Advanced Safety Features: SpillSlope shelves, leakproof sump, Haz-Alert labels, and secure latching
- Durable Finish: Lead-free epoxy/polyester powder-coat for chemical resistance and longevity
- Customizable Options: Offers a range of configurations to meet specific industry and location requirements, ensuring compliance with safety standards

Description

Justrite Classic Flammable Safety Cabinets are the industry-leading solution for safely storing flammable liquids and other hazardous materials in industrial settings. These cabinets are designed to protect workers, reduce fire risks, and improve productivity while meeting OSHA and NFPA requirements. With their versatile configuration options, you can customize your safety cabinet to suit your specific needs and compliance standards.

Constructed with sturdy 18-gauge steel double-walls and featuring 1.5 inches of insulating air space, Justrite cabinets offer superior fire resistance. The fully welded design ensures long-lasting durability and enhanced protection during fire conditions. High-performance doors with a fail-safe, 3-point stainless steel bullet latching system provide maximum security, while the innovative U-Loc™ handle offers additional locking options.

Safety is paramount in the design of these cabinets. Haz-Alert™ reflective warning labels ensure high visibility even in low-light conditions or power outages. Dual vents with flame arresters and a built-in grounding connector further enhance the cabinet's safety features.

All cabinets are constructed with patented SpillSlope® galvanized steel shelves designed to direct spills to a leakproof 2-inch bottom sump, meeting EPA requirements. Adjustable on 3-in (76-mm) centers, all SpillSlope shelves meet ANSI MH28.1 standards with a 350-lb (159-kg) safe allowable load. Welded shelf hangers interlock with the shelf to offer maximum stability with no flimsy brackets to lose.

Justrite Classic Safety Cabinets are available in various configurations to meet your specific storage needs. Choose from different colors to designate the type of materials stored, and select the appropriate capacity and height to fit your workspace and storage requirements. To ensure compliance with specific regulations, these cabinets offer various door closure options, including manual-close, self-close, and sliding self-close doors. This flexibility allows you to meet the exact safety standards required for your industry and location.

Self-closing doors are a valuable feature in safety cabinets, offering enhanced safety and compliance. These doors automatically close and latch in the event of a fire or emergency, providing a critical barrier against the spread of fire and reducing the risk of ignition outside the cabinet. Self-closing doors minimize human error by ensuring that the cabinet is always properly closed, even when staff are distracted or forgetful. This feature is particularly important for storing flammable liquids, as it helps contain vapors and prevent accidental releases, thereby improving overall workplace safety. The self-closing mechanism uses fusible links that melt at 165°F (74°C), causing the doors to shut automatically under fire conditions.

These cabinets feature a durable lead-free epoxy/polyester powder-coat finish, providing excellent chemical resistance both inside and out. This finish also helps minimize the effects of corrosion and humidity, ensuring

the longevity of your safety cabinet.

FM approved and backed by a ten-year warranty, Justrite Classic Safety Cabinets offer peace of mind and reliable performance. Whether you're working in a laboratory, manufacturing facility, oil refinery, or chemical processing plant, these cabinets provide the flexibility and compliance you need for safe flammable liquid storage.

Invest in a Justrite Classic Safety Cabinet to ensure the highest level of safety, compliance, and customization for your workplace's hazardous material storage needs. Configure your cabinet today to find the perfect solution for your specific requirements.

Specifications

Model No	89-CL
----------	-------

Prop 65

⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Product Options

Color:	Red
	Yellow
	Gray
	White
Capacity:	30 gallon
	45 gallon
	60 gallon
	90 gallon
Door Style:	Self Close
	Sliding Self Close
	Manual
Height:	35
	44
	65